

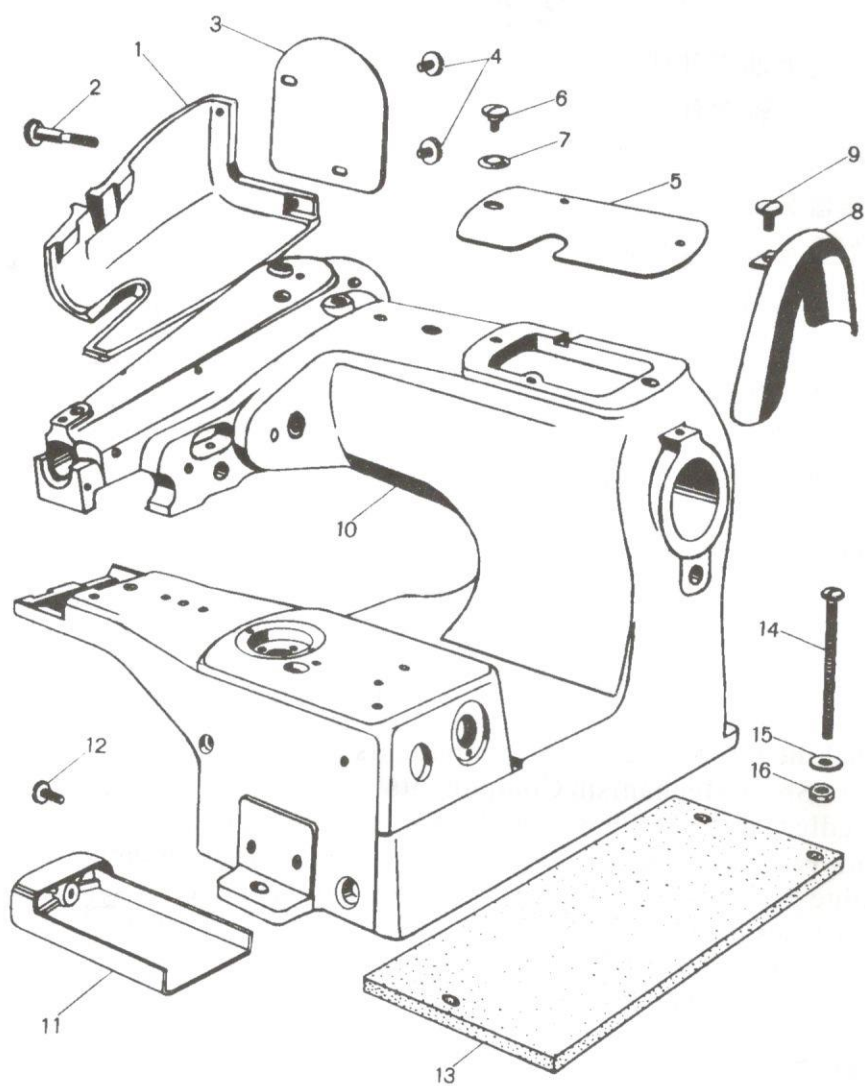


图 1

机 架 及 盖 部 零 部 件

Machine Frame & Covers Components

序 号 Ref.NO.	部件号码 Parts No.	部件名称 Description	部件名称 Description
1-1	4139	边盖	Arm Side Cover
1-2	4144	边盖固定螺钉	Arm Side Cover Set Screw
1-3	4137	边盖板	Arm Side Cover Plate
1-4	5227	边盖板螺钉	Arm Side Cover Plate Screw
1-5	4138-B	顶盖板	Arm Top Cover Plate
1-6	4141	顶盖板螺钉	Arm Top Cover Plate Screw
1-7	4140-A	顶盖板垫圈	Arm Top Cover Plate Washer
1-8	4143	皮带护罩	Belt Guard
1-9	4048-A	皮带护罩固定螺钉	Belt Guard Set Screw
1-10	AM100-B	机架	Machine Frame
1-11	11091	端面盖	End Cover
1-12	11153	端面盖固定螺钉	End Cover Set Screw
1-13	4214	机器底座毛毡护垫	Machine Base Felt Pad
1-14	AC-15	机器底座螺钉	Machine Base Clamp Screw
1-15	AC-17	机器底座垫圈	Machine Base Washer
1-16	AC-16	机器底座螺母	Machine Base Nut

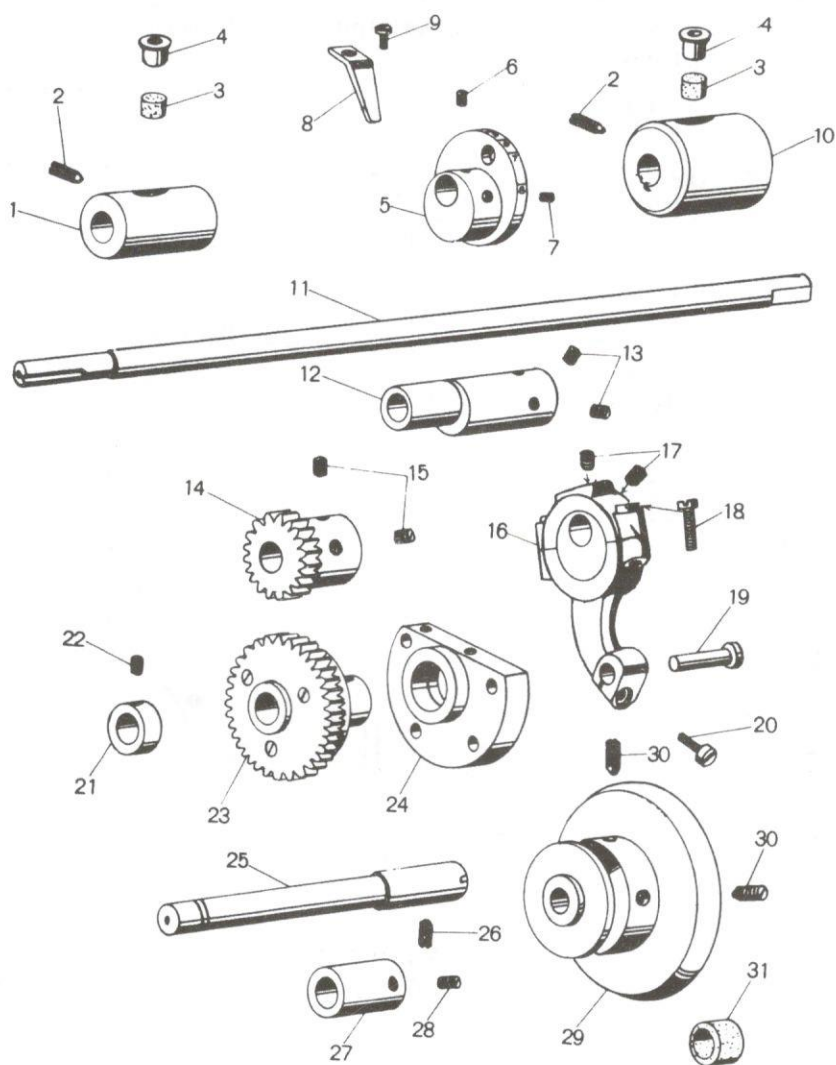


图 2

主要传动轴部件

Main Shaft Mechanism Components

序 号 Ref.NO.	部件号码 Parts No.	部件名称 Description	部件名称 Description
2-1	11005	主轴前套管	Main Shaft Bushing(Front)
2-2	131	主轴套管螺钉	Main Shaft Bushing Set Screw
2-3	4217	油毡	Oiling Felt
2-4	4218-A	油盖	Oil Cap
2-5	4133	针缝调节轮	Counterweight(w/Stitch Length Numbers)
2-6	132	钉缝调节轮大螺钉	Counterweight Set Screw(Short)
2-7	98	钉缝调节轮大螺钉	Counterweight Set Screw(Long)
2-8	4134	缝迹长度指示器	Stitch Length Indicator
2-9	124	缝迹长度指示器螺钉	Stitch Length Indicator Set Screw
2-10	11006	主轴后套管	Main Shaft Bushing(Rear)
2-11	4003-A	主轴	Main Shaft
2-12	6048	松紧线偏心器	Thread Tension Releasing Eccentric
2-13	96	主轴齿轮螺钉	Thread Tension Releasing Eccentric Set Screw
2-14	4162	主轴齿轮	Skip Stitch Gear(small)
2-15	96	松紧线索偏心器螺钉	Skip Stitch Gear Set Screw
2-16	525-A	偏连杆	Eccentric Rod Assembly (w/Ref.Nos.17.18)
2-17	98	偏心连杆套管螺钉	Eccentric Bushing Screw
2-18	105	偏心连杆螺钉	Eccentric Rod Set Screw
2-19	4065	偏心连杆销子	Eccentric Rod Stud
2-20	1413	偏心连杆销子螺钉	Eccentric Rod Stud Set Screw
2-21	4077-A	主轴齿轮轴环	Skip Stitch Gear Shaft Collar (small)
2-22	132	主轴齿轮轴环螺钉	Skip Stitch Gear Shaft Collar Set Screw
2-23	4163	跳缝齿轮	Skip Stitch Gear (Large)Assembly
2-24	4164	离心杆接头	Eccentric Rod Connection
2-25	4166-A	跳缝齿杆轴	Skip Stitch Gear Shaft
2-26	131	跳缝齿轮轴螺钉	Skip Stitch Gear Shaft Set Screw
2-27	4168	跳缝齿轮轴环	Skip Stitch Gear Shaft Collar (Large)
2-28	132	跳缝齿轮轴环螺钉	Skip Stitch Gear Shaft Collar Set Screw
2-29	4142-B	皮带轮	Hand Wheel (Pulley)
2-30	131	皮带轮螺钉	Hand Wheel Set Screw
2-31	4207-A	皮带轮橡皮盖	Hand Wheel Rubber Cap

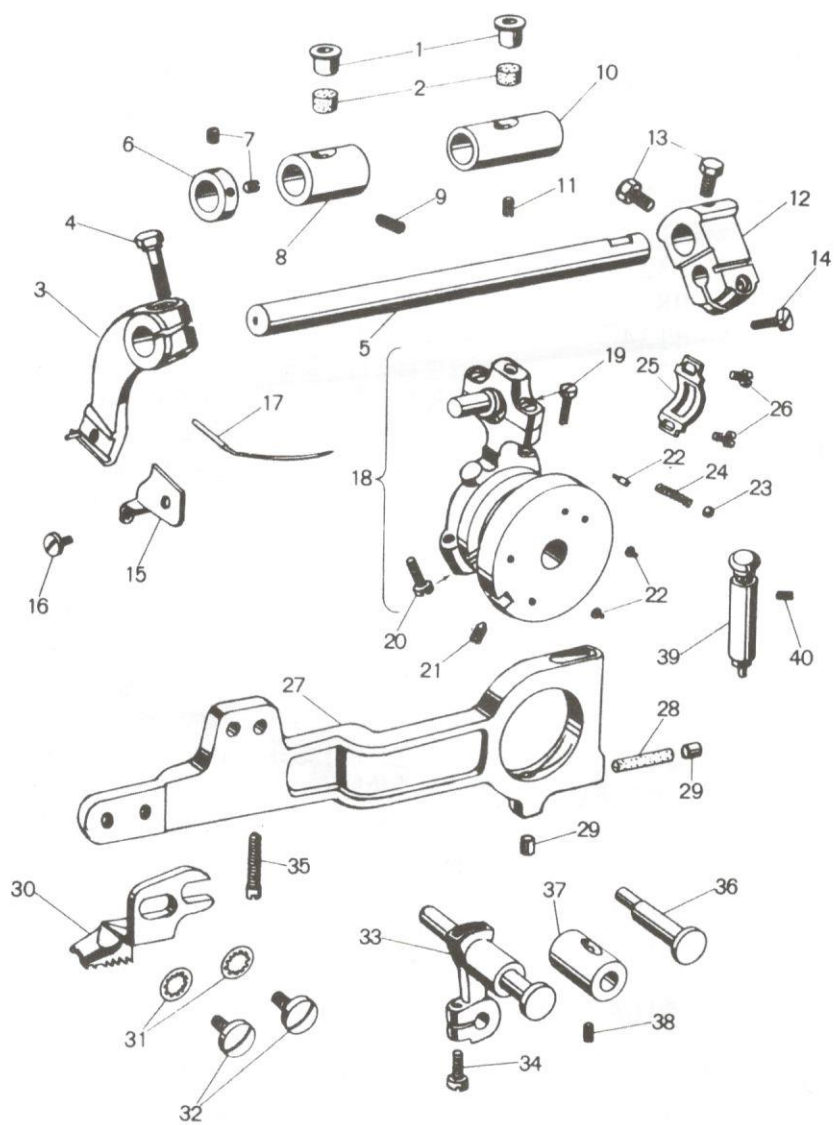


图 3

针摆装置及进料装置零部件

Needle Carrier & Feed Dog Mechanism Components

序 号 Ref.NO.	部件号码 Parts No.	部件名称 Description	部件名称 Description
3-1	4128A	油盖	Oil Cap
3-2	4217	油毡	Oiling Felt
3-3	4023A	针摆	Needle Carrier
3-4	4024	针摆螺钉	Needle Carrier Set Screw
3-5	4019	针轴	Needle Carrier Shaft
3-6	4022	针轴环	Needle Carrier Shaft Collar
3-7	129-13	针轴环螺钉	Needle Carrier Shaft Collar Set Screw
3-8	4020-A	针轴前套管	Needle Carrier Shaft Bushing(Front)
3-9	129-A	针轴前套管螺钉	Needle Carrier Shaft Bushing Set Screw
3-10	4021-A	针轴后套管	Needle Carrier Shaft Bushing(Rear)
3-11	129-A	针轴后套管螺钉	Needle Carrier Shaft Bushing Set Screw
3-12	4017-A	针轴曲柄螺钉	Needle Carrier Shaft Crank
3-13	4018-A	针轴曲柄螺钉	Needle Carrier Shaft Crank Set Screw
3-14	114-A	针轴曲柄夹紧螺钉	Needle Carrier Shaft Crank Clamp Screw
3-15	11139	针夹	Needle Clamp
3-16	121	针夹螺钉	Needle Clamp Set Screw
3-17	4181	机针 (LW/6T系列)	Needle (System LW X 6T)
3-18	1151	关节球头组件	Needle Driving Eccentric Assembly w/Rod,Regulator&Screws(Ref.Nos.19-22)
3-19	4211-C	连接杆短螺钉	Ball Connecting Rod Set Screw(short)
3-20	4173	连接杆长螺钉	Ball Connecting Rod Set Screw(Long)
3-21	4009B	连杆偏心器螺钉	Needle Driving Eccentric Set Screw
3-22	4012-A	缝迹指示器螺钉	Stitch Regulator Screw
3-23	4010	缝迹指示器钢球	Stitch Regulator Ball
3-24	4011-A	缝迹指示器弹簧	Stitch Regulator Spring
3-25	4014	球头套盖	Ball Connecting Rod Cap
3-26	4015	球头套盖螺钉	Ball Connecting Rod Cap Set Screw
3-27	11902	进料杆	Feed Lever
3-28	11124-J	油毡	Oiling Felt
3-29	11121	油盖	Oil Cap
3-30	10129	牙齿	Feed Dog
3-31	2528	牙齿垫圈	Feed Dog Washer
3-32	4048-A	牙齿螺钉	Feed Dog Set Screw
3-33	1152-A	送布曲柄及销子	Feed Link & Stud
3-34	4173	送布曲柄销子螺钉	Feed Ling Clamp Screw
3-35	4042A	进料曲柄销子螺钉	Feed Link Stud Set Screw
3-36	4044	进料曲柄偏心销	Feed Link Eccentric Stud
3-37	4043	进料曲柄套管	Feed Link Eccentric Stud Bushing
3-38	129A	进料曲柄套管螺钉	Feed Link Eccentric Stud Bushing Set Screw
3-39	520A	缝迹长度调整活塞	Stitch Length Regulating Plunger Assembly
3-40	129A	活塞螺钉	Stitch Length Regulating Plunger Set Screw

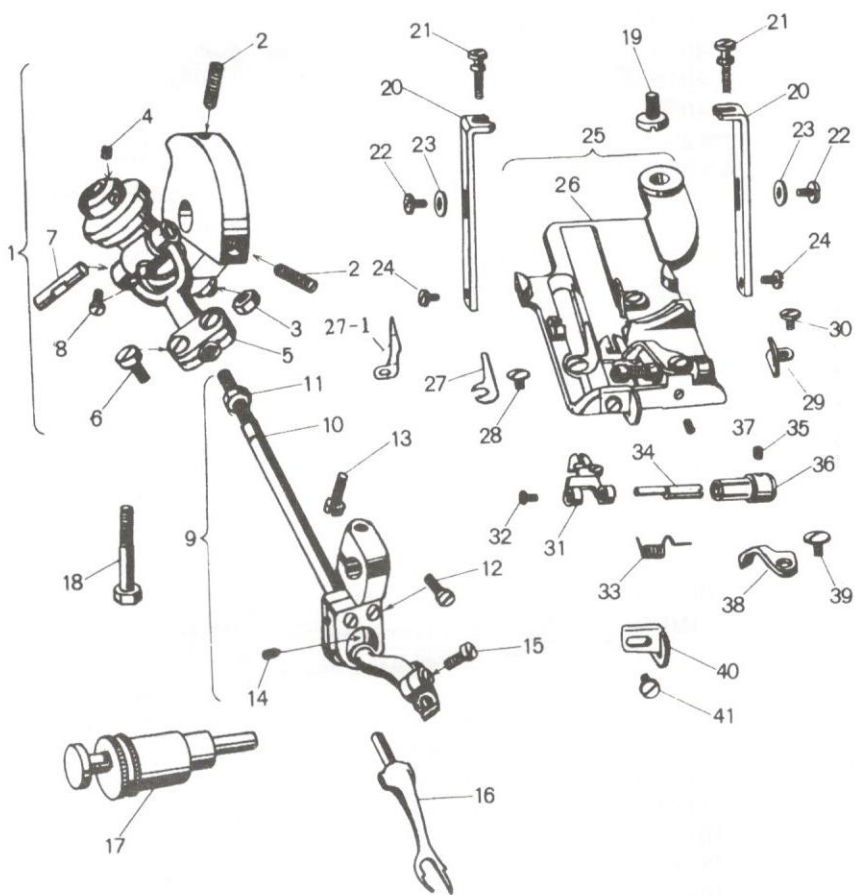


图 4

打环器装置及针板零部件

Looper Drive Mechanism & Presser Foot Parts Components

序 号 Ref.NO.	部件号码 Parts No.	部件名称 Description	部件名称 Description
4-1	538-A	打环器曲柄组件	Looper Drive Crank Assembly w/Looper Yoke & Screw (Ref.Nos.2-8)
4-2	4191	打环器曲柄组件螺钉	Looper Drive Crank Set Screw
4-3	5039-A	打环器曲柄螺母	Looper Drive Crank Stud Nut
4-4	129-B	打环器曲柄轴环螺钉	Looper Drive Crank Stud Collar Set Screw
4-5	4030-A	打环器	Looper Yoke
4-6	4031	打环器螺钉	Looper Yoke Set Screw
4-7	4032-A	打环器销子螺钉	Looper Yoke Pin
4-8	8142	打环器销子螺钉	Looper Yoke Pin Set Screw
4-9	539-A	打环器组件及螺钉	Looper Carrier Assembly w/Ball Joint & Screws (Ref.Nos.10-15)
4-10	4035-A	打环器针	Looper Carrier
4-11	4176	打环器针螺母	Looper Carrier Nut
4-12	4216	打环器轴承螺钉	Looper Carrier Ball Joint Set Screw
4-13	4213	打环器轴承夹紧螺钉	Looper Carrier Ball Joint Clamp Screw
4-14	4179-D	打环器球头紧定螺钉	Looper Carrier Ball Spot Screw
4-15	4040	打环器针夹紧螺钉	Looper Clamp Screw
4-16	4039	挑线叉	Looper
4-17	505	偏心套筒及销子	Eccentric Sleeve & Pin
4-18	4038	套筒螺钉	Eccentric Sleeve Clamp Screw
4-19	4050	针板螺钉	Presser Foot Set Screw
4-20	4061-A	针板支架	Presser Foot Bracket
4-21	4062	针板支架调节螺钉	Presser Foot Bracket Adjusting Screw
4-22	121-B	针板支架夹紧螺钉	Presser Foot Bracket Holding Screw
4-23	11158	针板支架垫圈	Presser Foot Bracket Screw
4-24	4186-A	针板夹紧螺钉	Presser Foot Holding Screw
4-25	PF100	针板组件	Presser Foot Assembly (Ref.Nos.26-40)
4-26	4049-B	针板	Plain Presser Foot
4-27	11563	导针板 (422-111563-A 缝迹设定装置)	Needle Guide
4-28	4052-B	导针板螺钉	Stitch Stabilizing Guide
4-29	4058-A	链指针	Needle Guide Set Screw
4-30	4158对性	链指针螺钉	Chaining Finger
4-31	4055CAS	压布板	Chaining Finger Set Screw
4-32	4185	压布板螺钉	Cloth Retainer
4-33	4056	压布板弹簧	Cloth Retainer Screw
4-34	4054	压布板偏心销	Cloth Retainer Spring
4-35	4183	压布板偏心销螺钉	Cloth Retainer Eccentric Stud
4-36	4053	压布板偏心套筒	Cloth Retainer Eccentric Stud Set Screw
4-37	130-B	压布板偏心套筒螺钉	Cloth Retainer Eccentric Stud Bushing
4-38	4057-C	定位器螺钉	Cloth Retainer Eccentric Stud Bushing Set Screw
4-39	4182	定位器螺钉	Cloth Retainer Stopper
4-40	4059	引边装置	Cloth Retainer Stopper Set Screw
4-41	4185	引边装置螺钉	Edge Guide
			Edge Guide Set Screw

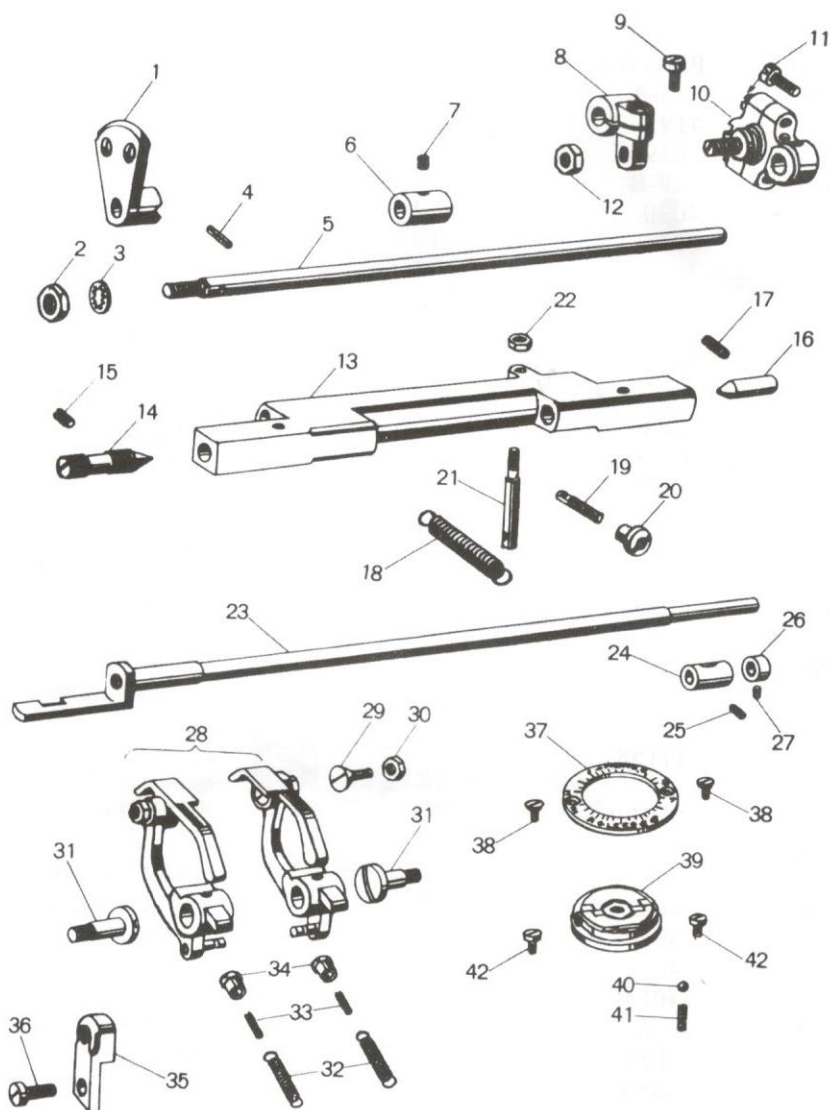


图 5

起菱盘及进料板机械零部件

Ridge Forming Disc & Feed Plate Machauism Components

序 号 Ref.NO.	部件号码 Parts N o.	部件名称 Description	部件名称 Description
5-1	11220-T	起菱盘	Ridge Forming Disc
5-2	4208	起菱盘螺母	Ridge Forming Disc Nut
5-3	5222-B	起菱盘垫圈	Ridge Forming Disc Washer
5-4	8150	起菱盘档销	Ridge Forming Disc Positioning Pin
5-5	4109-A	起菱盘轴	Ridge Forming Disc Shaft
5-6	4111	起菱盘轴环	Ridge Forming Disc Shaft Collar
5-7	129-B	起菱盘轴环螺母	Ridge Forming Disc Shaft Collar Set Screw
5-8	4112	起菱盘曲柄	Ridge Forming Disc Shaft Crank
5-9	113-B	起菱盘曲柄螺钉	Ridge Forming Disc Shaft Crank Set Screw
5-10	515-A	球形接头和螺钉	Ball Joint & Stud Assembly with Screws (Ref.No.11)
5-11	108	球头固定螺母	Ball Joint Set Screw
5-12	4176	球头固定螺母	Ball Stud Nut
5-13	4102	起菱盘调节柄	Disc Adjusting Holder
5-14	4108	调节柄调节螺钉	Disc Adjusting Holder Pivot Bearing Screw
5-15	98	调节柄轴固定螺母	Disc Adjusting Holder Pivot Bearing Set Screw
5-16	4107	调节柄锥度销	Disc Adjusting Holder Pivot Bearing Pin
5-17	98-A	调节柄锥度销螺母	Disc Adjusting Holder Pivot Bearing Pin Set Screw
5-18	4104	调节柄弹簧	Disc Adjusting Holder Spring
5-19	4105	调节柄弹簧螺母	Disc Adjusting Holder Spring Screw
5-20	4106	调节柄弹簧螺母	Disc Adjusting Holder Spring Nut
5-21	4103-A	调节柄弹簧螺母	Disc Adjusting Holder Spring Stud
5-22	5208	调节柄弹簧拉销螺母	Disc Adjusting Holder Spring Stud Nut
5-23	11075-A	抬压脚轴	Feed Plate Shaft
5-24	4043	抬压脚轴套管	Feed Plate Shaft Bushing
5-25	98	套管螺钉	Feed Plate Shaft Bushing Set Screw
5-26	4090	抬压脚轴轴环	Feed Plate Shaft Collar
5-27	129-B	抬压脚轴轴环螺母	Feed Plate Shaft Collar Set Screw
5-28	516-B	压脚组件	Feed Plate Assembly w/Screws & Nut(Ref.No.28,30)
5-29	4101	压脚螺母	Feed Plate Taper Bearing Screw
5-30	4070	压脚螺母	Feed Plate Nut
5-31	4096	压脚轴位螺母	Feed Plate Shoulder Bearing Screw
5-32	4093-BA	压脚拉簧	Feed Plate Spring
5-33	4094	压脚拉簧螺母	Feed Plate Spring Screw
5-34	4095	压脚拉簧螺母	Feed Plate Spring Adjusting Nut
5-35	4097-A	压脚托架	Feed Plate Bracket
5-36	113-B	托架螺钉	Feed Plate Bracket Set Screw
5-37	4122	调节显示牌	Disc Adjusting Dial
5-38	4129	调节显示牌螺钉	Disc Adjusting Dial Set Screw
5-39	519-AA	起菱盘调节器	Disc Adjusting Regulator Assembly
5-40	4010	钢球	Disc Adjusting Regulator Ball
5-41	4011	调节弹簧	Disc Adjusting Regulator Spring
5-42	115	调节基座螺钉	Disc Adjusting Regulator Base Set Screw

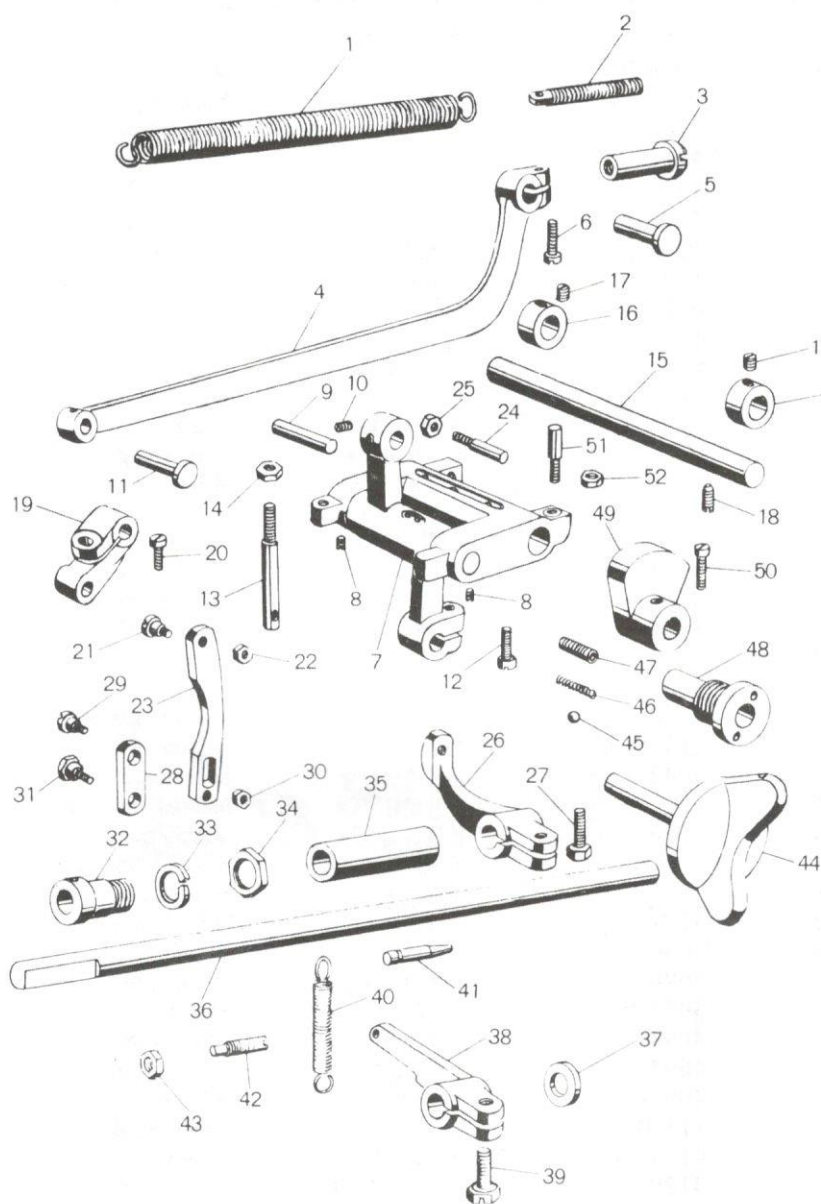


图 6

起菱盘摆动装置及机杆零部件

Disc Oscillating Mechanism & Knee Press Shaft Parts Compinents

序 号 Ref.NO.	部件号码 Parts N o.	部件名称 Description	部件名称 Description
6-1	4073-A	摆杆托架弹簧	Disc Oscillating Rod Bracket Spring
6-2	4074	弹簧螺钉	Disc Oscillating Rod Bracket Spring Screw
6-3	4075	弹簧螺母	Disc Oscillating Rod Bracket Spring Nut
6-4	4169	连杆	Connecting Rod
6-5	4065	连杆销	Connecting Rod Stud
6-6	114-B	连杆销螺钉	Connecting Rod Stud Set Screw
6-7	S-4066BB	摆杆	Disc Oscillating Rod Assembly (w/Ref.No.8)
6-8	129-B	摆杆轴螺钉	Disc Oscillating Rod Shaft Set Screw
6-9	4115	摆杆销1	Disc Oscillating Rod Pin
6-10	129-A	摆杆销螺钉	Disc Oscillating Rod Pin Set Screw
6-11	4065	摆杆销2	Disc Oscillating Rod Stud
6-12	4031-A	摆杆销螺钉	Disc Oscillating Rod Stud Set Screw
6-13	4069-A	托架弹簧栓	Disc Oscillating Rod Bracket Spring Stud
6-14	4070	弹簧栓螺钉	Disc Oscillating Rod Bracket Spring Stud Nut
6-15	4076	托架轴	Disc Oscillating Rod Bracket Shaft
6-16	4077-A	托架轴环	Disc Oscillating Rod Bracket Shaft Collar
6-17	132	托架轴环螺钉	Disc Oscillating Rod Bracket Shaft Collar Set Screw
6-18	131	托架轴螺钉	Disc Oscillating Rod Bracket Shaft Set Screw
6-19	4098-A	进料板曲柄螺钉	Feed Plate Depressing Crank
6-20	105	进料板曲柄螺钉	Feed Plate Depressing Crank Set Screw
6-21	4178-A	曲柄轴位螺钉	Crank&Link Shoulder Screw
6-22	5207	曲柄轴位螺钉螺母	Crank & Link Shoulder Screw Nut
6-23	4086	连接杆螺母	Connecting Link(Large)
6-24	4067-A	连接杆螺母	Connecting Link Guide Screw
6-25	4068-A	连接杆螺母	Connecting Link Guide Screw Nut
6-26	4083	机轴托架	Knee Press Shaft Crank
6-27	4084	机轴托架螺钉	Knee Press Shaft Crank Set Screw
6-28	4087	小连接杆	Connecting Link (small)
6-29	4088-A	小连接杆螺母	Connecting Link Set Screw
6-30	5207	小连接杆螺母	Connecting Link Set Screw Nut
6-31	4085	托架连接螺钉	Crank & Link Shoulder Screw
6-32	4081-A	机轴套管	Knee Press Shaft Bushing
6-33	4206	机轴套管垫圈	Knee Press Shaft Bushing washer
6-34	4205	机轴套管螺母	Knee Press shaft Bushing Nut
6-35	4177	机轴套管	Knee Press Shaft Sleeve
6-36	11063-A	机轴	Knee Press Shaft
6-37	11539	机轴垫圈	Knee Press Shaft Washer
6-38	4221	限位连杆	Knee Press Stop Lever
6-39	4084	限位连杆螺钉	Knee Press Stop Lever Clamp Screw
6-40	4222-A	限位连杆弹簧	Knee Press Stop Lever Spring
6-41	4116	限位连杆弹簧螺钉	Knee Press Stop Lever Spring Pin
6-42	11050	限位连杆限位螺钉	Knee Press Stop Lever Limint Screw
6-43	4068-A	限位螺钉螺母	Knee Press Stop Lever Limint Screw Nut
6-44	4171	跳缝拉杆	Skip-Stitch Selecting Grip
6-45	4010	钢球	Skip-Stitch Selecting Ball
6-46	4011	跳缝拉杆弹簧	Skip-Stitch Selecting Spring
6-47	4174	跳缝拉杆套管	Skip-Stitch Selecting Spring Holder
6-48	4170	跳缝拉杆套管	Skip-Stitch Selecting Grip Bushing
6-49	4172	跳缝拉杆凸轮	Skip-Stitch Selecting Cam
6-50	4173	凸轮螺钉	Skip-Stitch Selecting Cam Set Screw
6-51	4175-A	凸轮连接螺钉	Skip-Stitch Selecting Cam Stud
6-52	4070-A	凸轮螺母	Skip-Stitch Selecting Cam Stud Nut

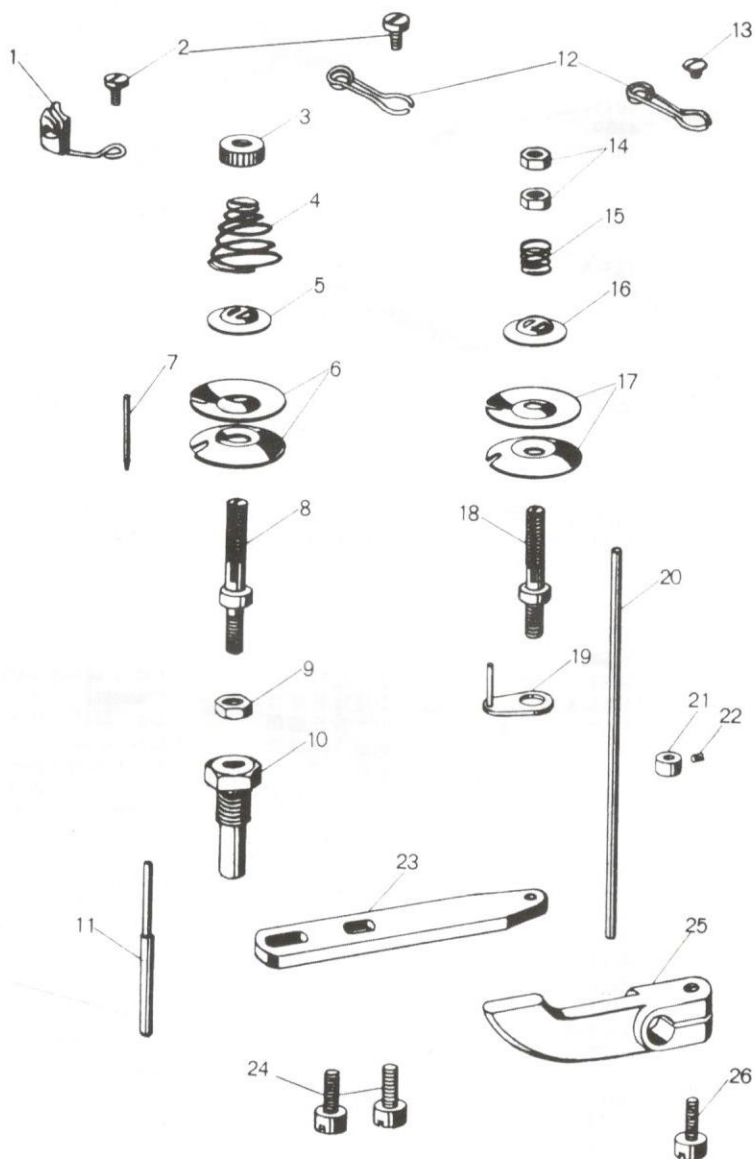


图 7

压线装置零部件

Thread Tension & Nipper Parts Components

序 号 Ref.NO.	部件号码 Parts No.	部件名称 Description	部件名称 Description
7-1	11136	引线装置	Thread Guide With Ceramic
7-2	113-A	引线装置螺钉	Thread Guide Set Screw
7-3	81	压线螺母	Thread Tension Nut
7-4	79-B	压线弹簧	Thread Tension Spring
7-5	77	压线垫圈	Thread Tension Washer
7-6	5190-A	压线板	Thread Tension Disc
7-7	4204	压线板档销	Thread Tension Disc Pin
7-8	4209	压线杆	Thread Tension Staff
7-9	4068-A	压线杆托架	Thread Tension Staff Nut
7-10	4201	压线杆螺母	Thread Tension Staff Bracket
7-11	4202	线迹松紧销	Thread Tension Releasing Pin
7-12	4203-A	引线装置	Thread Guide
7-13	4193	引线装置托架	Thread Guide Set Screw
7-14	4199	夹线螺母	Thread Nipper Nut
7-15	4198	夹线弹簧	Thread Nipper Spring
7-16	77	夹线垫圈	Thread Nipper Washer
7-17	5190-A	压线板	Thread Nipper Disc
7-18	5067	压线杆	Thread Nipper Staff
7-19	4197	线夹支柱	Thread Nipper Disc Prop
7-20	11162	线夹松紧钉	Thread Nipper Releasing Pin
7-21	6053	线夹松紧套筒	Thread Nipper Releasing Pin Collar
7-22	130-B	松紧钉套筒螺母	Thread Nipper Releasing Pin Collar Set Screw
7-23	4195-C	线夹松紧钉支柱	Thread Nipper Releasing Pin Support
7-24	8158	松紧钉支柱螺钉	Thread Nipper Releasing Pin Support Set Screw
7-25	4194-A	线夹松紧钉杆	Thread Nipper Releasing Pin Lever
7-26	8158	线夹松紧钉杆螺钉	Thread Nipper Releasing Pin Lever Set Screw

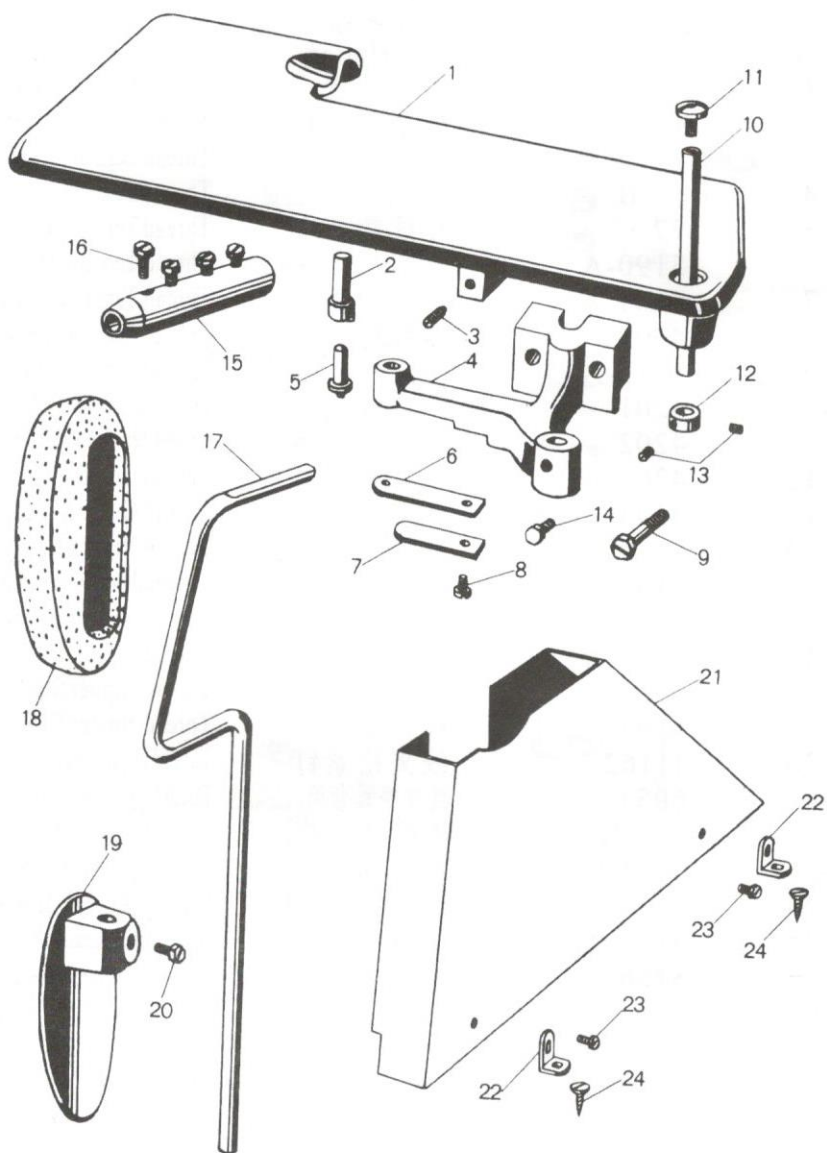


图 8

操作板, 压杆及皮带部位的零部

Work Plate, Knee Press & Belt Cover Parts Components

序 号 Ref.NO.	部件号码 Parts No.	部件名称 Description	部件名称 Description
8-1	4153	面板	Work Plate
8-2	4156	面板固定销	Work Plate Latch
8-3	4230	面板固定销螺钉	Work Plate Latch Set Screw
8-4	4157-A	面板支架	Work Plate Bracket
8-5	4159	面板支架弹簧销	Work Plate Bracket Spring Pin
8-6	4160	面板支架长弹簧片	Work Plate Bracket Leaf Spring(Long)
8-7	4161	面板支架短弹簧片	Work Plate Bracket Leaf Spring(Short)
8-8	4048-A	面板支架弹簧片螺钉	Work Plate Bracket Leaf Spring Set Screw
8-9	4158	面板支架固定螺钉	Work Plate Bracket Set Screw
8-10	4154-A	面板轴	Work Plate Shaft
8-11	99-A	面板螺钉	Work Plate Shafte Screwed Cap
8-12	4155	面板轴套筒	Work Plate Shaft Collar
8-13	132	套筒螺钉	Work Plate Shaft Collar Set Screw
8-14	4180	面板轴螺钉	Work Plate Shaf Set Screw
8-15	4146-A	压杆套筒	Work Press Rod Sleeve
8-16	4147-B	压杆套筒螺钉	Knee Press Rod Sleeve Set Screw
8-17	4148-A	压杆	Knee Press Rod
8-18	4212	护垫	Knee Press Pad
8-19	4149	压板	Knee Press Plate
8-20	4147-B	压板螺钉	Knee Press Plate Set Screw
*8-21	4219-A	皮带罩	Belt Cover
*8-22	11554	皮带罩托架	Belt Cover Bracket
*8-23	5233	皮带罩架螺钉	Belt Cover Bracket Set Screw
*8-24	11557	皮带罩木螺钉	Belt Cover Wood Screw

*EXTRA ACCESSORIES

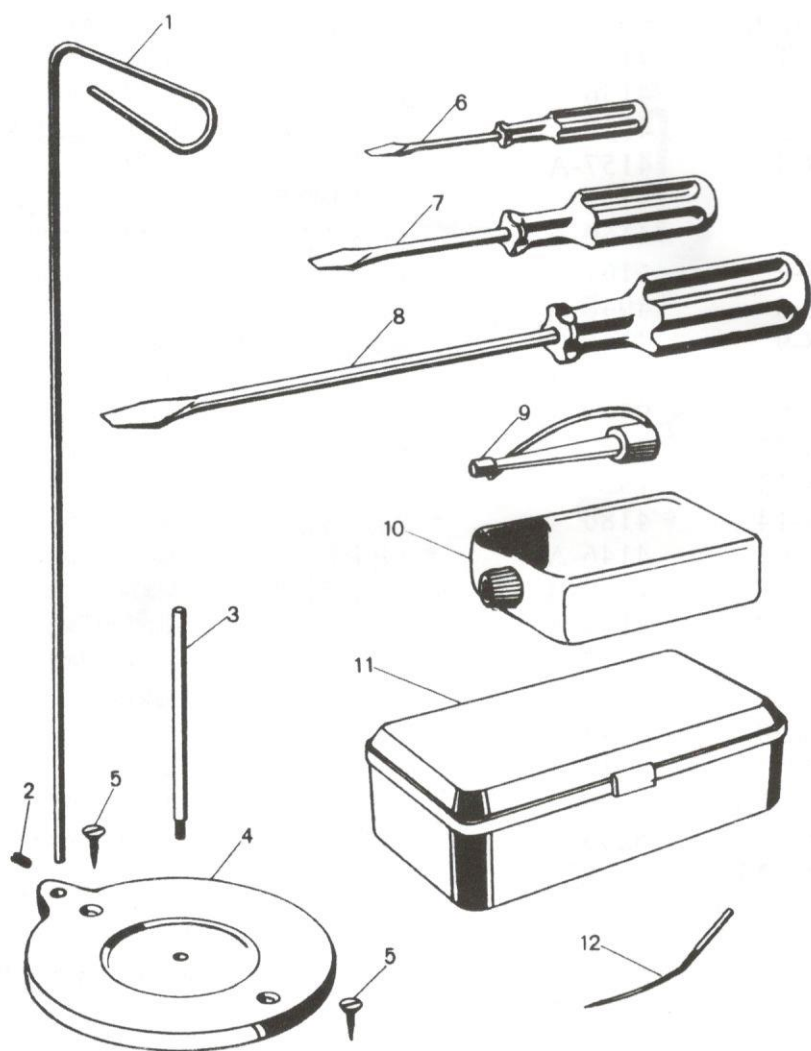


图 9

标准附件

Standard Accessories

序 号 Ref.NO.	部件号码 Parts No.	部件名称 Description	部件名称 Description
9-1	4152	引线装置	Thread Guide
9-2	129-A	引线装置螺钉	Thread Guide Set Screw
9-3	4151	线轴销	Spool Pin
9-4	4150	线轴底座	Cotton Stand Base
9-5	AC-10	线底座木螺钉	Cotton Stand Base Wood Screw
9-6	AC-03	螺丝刀 (小)	Screw Driver (small)
9-7	AC-02	螺丝刀 (中)	Screw Driver (Medium)
9-8	AC-01	螺丝刀 (大)	Screw Driver (Large)
9-9	AC-04A	加油器	Oiler
9-10	AC-05	油	Oil
9-11	AC-08	附件箱	Accessory Box
9-12	4181	缝针 (LW X 6T)	Needle (System LW x 6T)

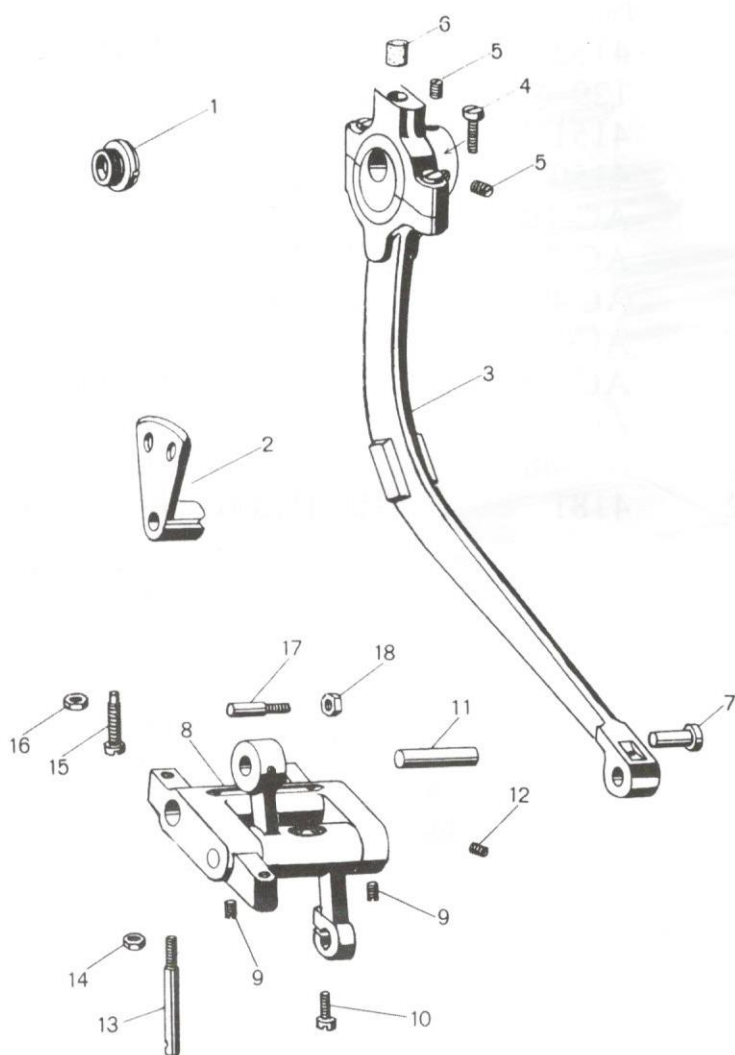


图 10

CM-100型 附加 零 部 件

Additional Parts For Model CM-100(Non-Skip Stitch)

序 号 Ref.NO.	部件号码 Parts No.	部件名称 Description	部件名称 Description
10-1	4145	螺钉盖	Screwed Cap(for hole of Grip4171)
10-2	4410AA	圆板	Ridge Forming Disc
10-3	507-A	偏心杆	Eccentric Rod Assembly(w/Ref.Nos.4-6)
10-4	105	偏心杆螺钉	Eccentric Rod Set Screw
10-5	98	偏心杆套筒螺钉	Eccentric Bushing Screw
10-6	4218	油毡	Oiling Felt
10-7	4065	圆板摆动杆栓	Disc Oscillating Rod Stud
10-8	S-4066AB	圆板摆动杆	Disc Oscillating Rod Assembly(w/Ref.No.9)
10-9	129-B	圆板摆动轴螺钉	Disc Oscillating Rod Shaft Set Screw
10-10	4069-A	圆板摆动杆栓螺钉	Disc Oscillating Rod Stud Set Screw
10-11	4115	圆板摆动杆钉	Disc Oscillating Rod Pin
10-12	129-A	圆板摆动杆螺钉	Disc Oscillating Rod Pin Set Screw
10-13	4069-A	圆板摆动杆托架弹簧栓	Disc Oscillating Rod Bracket Spring Stud
10-14	4070	弹簧栓螺母	Disc Oscillating Rod Bracket Spring Stud Nut
10-15	4078	托架调整螺钉	Disc Oscillating Rod Bracket Adjusting Screw
10-16	4070	调整螺钉螺母	Disc Oscillating Rod Bracket Adjusting Screw Nut
10-17	4067-A	连杆装置螺钉	Connecting Link Guide Screw
10-18	4068-B	连杆螺母	Connecting Link Guide Screw Nut

型 号CM-101-H附 加 零 部 件

Additional Parts for Models CM-101-H

序 号 Ref.NO.	部件号码 Parts No.	部件名称 Description	部件名称 Description
11-1	PF100H	压脚	PF100H Universal Presser Foot Assembly(Ref.Nos2-19)
11-2	4301-C	平压脚	Plain Universal Presser Foot
11-3	11563	引针装置	Needle Guide
11-4	4052-B	引针装置螺钉	Needle Guide Set Screw
11-5	4304	引边装置	Edge Guide
11-6	4182-A	引边装置螺钉	Edge Guide Set Screw
11-7	4302-S	布料档板	Cloth Retainer
11-8	4308	布料档板螺钉	Cloth Retainer Set Screw
11-9	10037	布料档板柄	Cloth Retainer Holer
11-10	10038	布料档板托架	Cloth Retainer Bracket
11-11	121	布料档板布料档板托架螺钉	Cloth Retainer Bracket Set Screw
11-12	4312-A	布料档板弹簧	Cloth Retainer Spring
11-13	10040	布料档板弹簧调整螺钉	Cloth Retainer Spring Adjusting Screw
11-14	10039	弹簧调整螺钉支柱	Cloth Retainer Spring Adjusting Screw Prop
11-15	5233-A	支柱螺钉	Cloth Retainer Spring Adjusting Screw Prop Set Screw
11-16	4311-A	布料档板弹簧套管	Cloth Retainer Spring Bushing
11-17	15128	布料档板弹簧钉	Cloth Retainer Spring Pin
11-18	4058-A	连锁指针	Chaining Finger
11-19	4185	连锁指针螺钉	Chaining Finger Set Screw