


SPARE PARTS LIST FOR SHOES REPAIRING MACHINE

2972

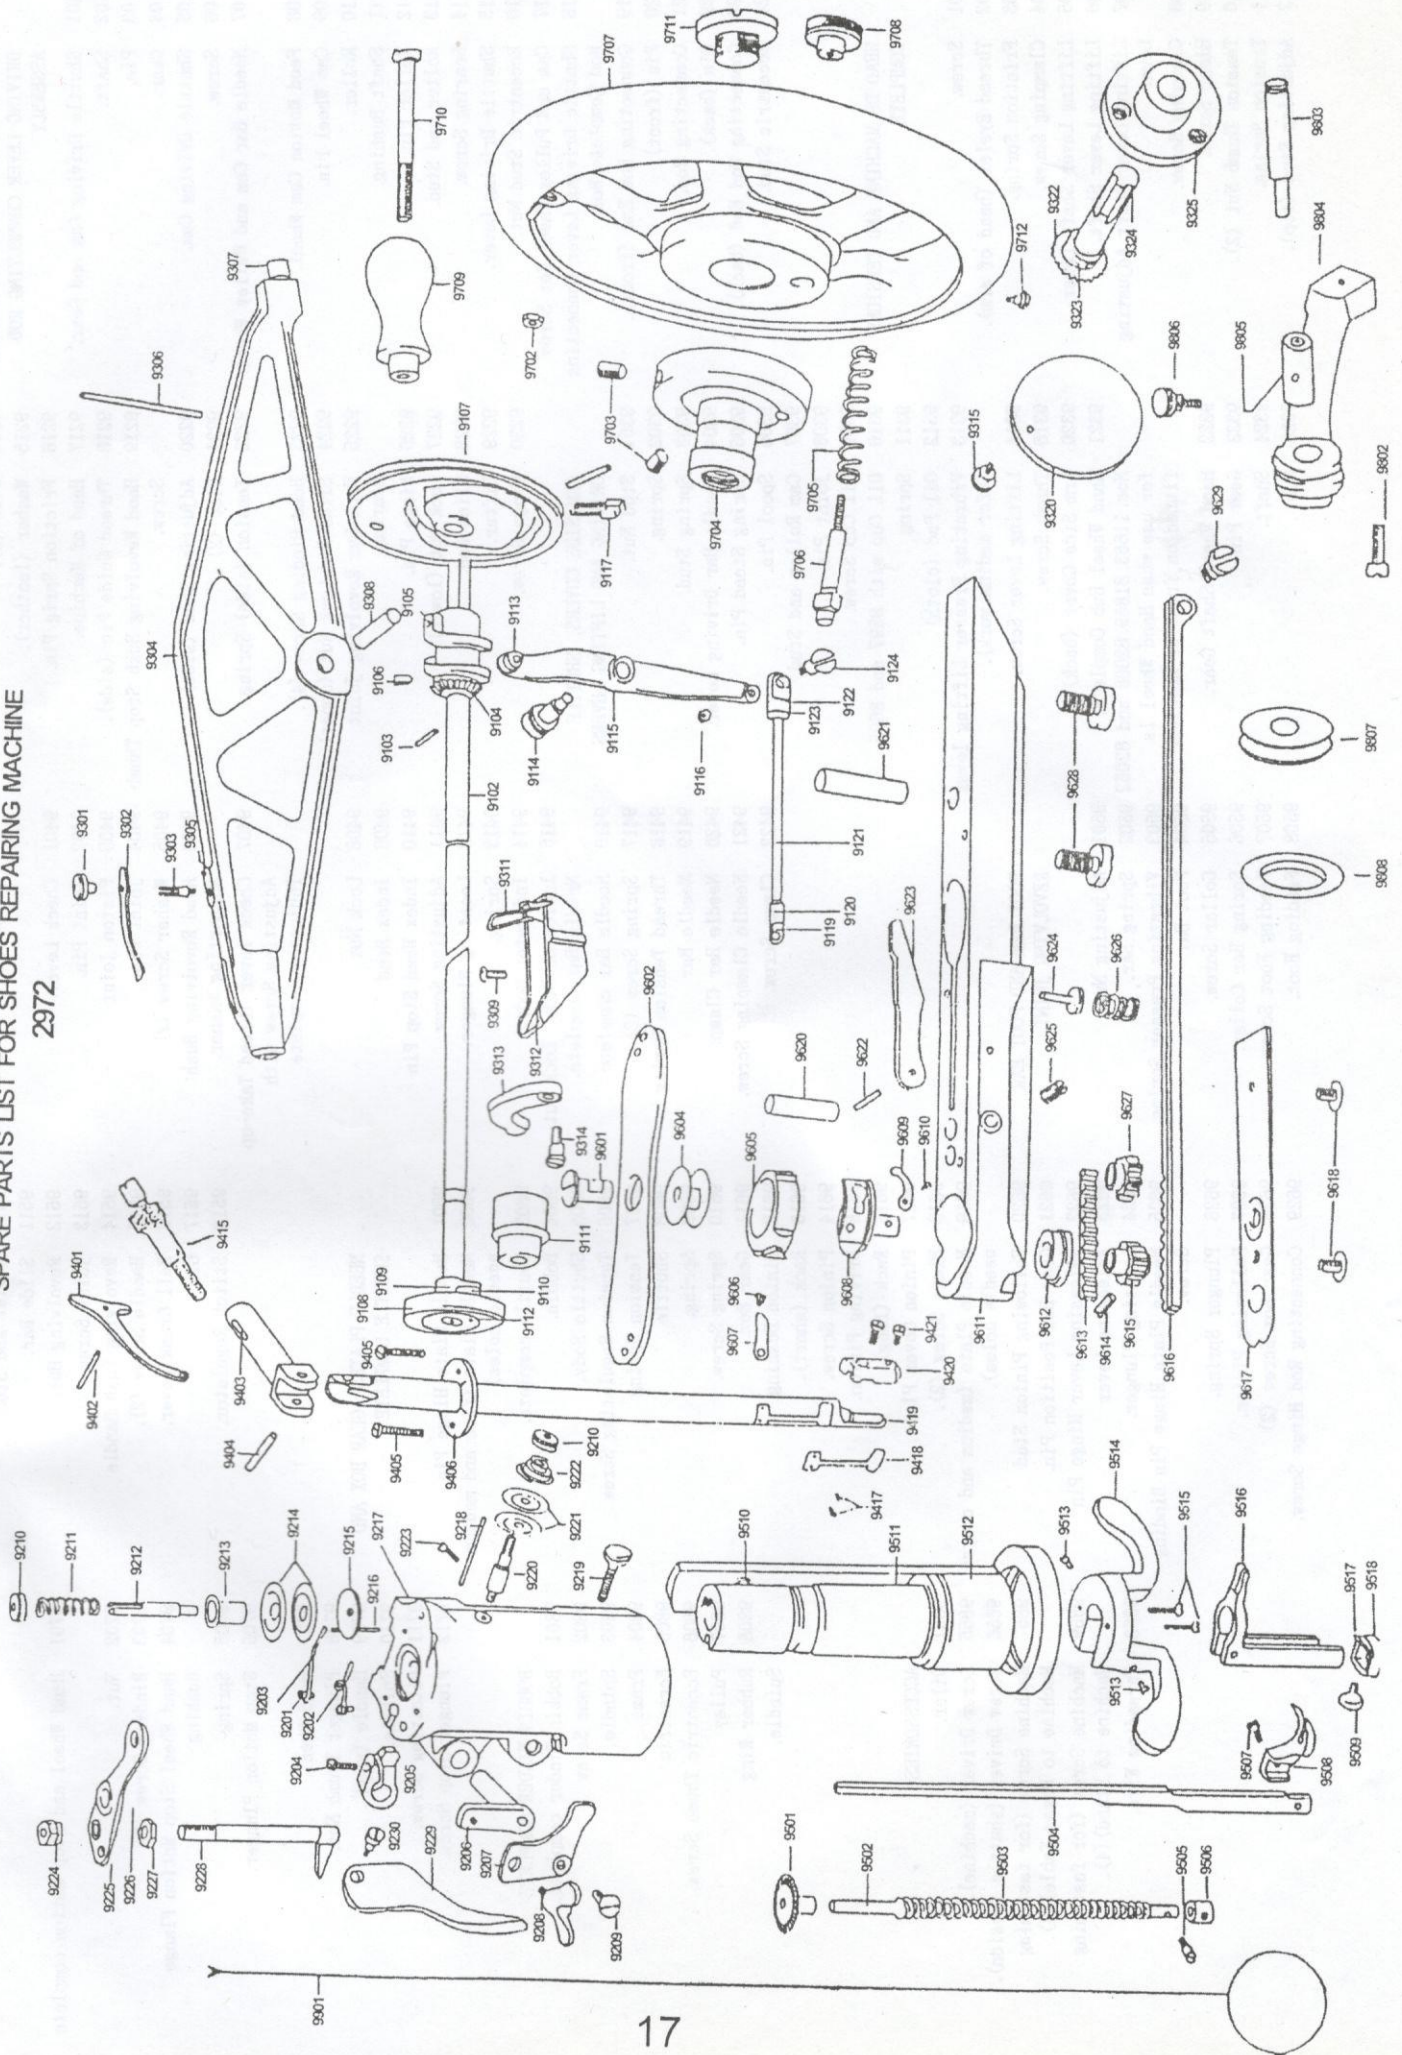

	SHAFT, CAM WHEEL, SHUTTLE DRIVING LEVER, PULLEY WHEEL AND SHUTTLE DRIVING LEVER CONNECTING ROD ASSEMBLY	9213 Cup (release). 9214 Disc (2). 9215 Washer (leather).	CHECK LEVER AND NEEDLE BAR COMPLETE	9609 Stitch Regulator Thumb Screw. 9610 Roller and Stud. 9611 Slide Bar. 9612 Revolving Bush. 9613 Joint Screw (2).	HAND WHEEL AND STOP MOTION COMPLETE
9101	Shuttle Driving Cam and Gear.	9217 Head of Machine.	9401 Check Lever.	9614 Revolving Bush Handle	9701 Hand Wheel and Stop Motion complete
9102	Shaft.	9218 Thread guide Pin (side).	9402 Joint Pin.	9615 Revolving Bush	9702 Nut.
9103	Pin.	9219 Head Revolving Bush Stop Thumb Screw.	9403 Piston Joint	9616 Handle Screw (2).	9703 Binding Screw (2)
9104	Gear.		9404 Joint Pin.	9617 Bell Crank Lever.	9704 Hand Wheel Stop Motion Flange Bushing
9105	Shuttle Driving Cam.	9220 Adjusting Stud (side).	9405 Washer Screw (2).	9618 Gib	9705 Spring
9106	Screw.	9221 Disc (2).	9406 Head Revolving Bush Supporting Washer.	9619 Stich Regulator.	9706 Stop Motion Plunger.
9107	Needle Bar Cam and Pulley Wheel.	9222 Tension (side) Spring.	9407 Check lever Thread Take-up Adjusting Screw with Indicator complete		
9108	Feed Motion Cam Wheel.	9223 Head Binding Screw (4).			9707 Hand Wheel.
9109	Cam Wheel Pin.	9224 Slide Rod Lock Nut (upper).			9708 Plunger Thumb Nut.
9110	Roller.	9225 Foot Bar Revolving Joint Bearing.	9408 Lock Nut	NEEDLE PLATES, GEAR BOX AND SHUTTLE COMPLETE	9709 Handle (wood).
9111	Shaft Bushing.		9409 Index Head		9710 Spindle.
9112	Roller Pin.	9226 Hinge Pin.	9410 Index Head Stop Pin		9711 Retaining Screw.
9113	Roller and Stud.	9227 Lock Nut (lower).	9411 Adjusting Screw	9601 Needle Plate Hinge Pin.	9712 Plunger Stop Screw.
9114	Bearing Screw.	9228 Slide Rod.	9412 Locating Plunger.	9602 Needle Plate (fine and medium needle holes)	
9115	Shuttle Driving Lever.	9229 Lifter.	9413 Spring.		
9116	Eccentric Stud Nut.	9230 Hinge Screw.	9414 Indicator Body.	9603 Shuttle complete.	
9117	Cam and Pulley Wheel Set Screw		9415 Indicator Body, Lock Nut	9604 Bobbin.	BOBBIN WINDER COMPLETE
9118	Shuttle Driving Lever Connecting Rod Complete, Nos.			9605 Shuttle Body.	Bobbin Winder complete.
9119	Connecting Rod End (front).	ARM SIDE COVERS, SHUTTLE DRIVING AND LIFTING LEVERS 9301 Stud Nut.	9416 Needle Bar complete.	9606 Tension Regulating Screw	9802 Frame Screw
9120	Pin (front).	9302 Spring.	9417 Spring Screw (2).	9607 Tension Spring	9803 Spindle.
9121	Connecting Rod.	9303 Spring Stud.	9418 Thread Tension Spring.	9608 Shuttle	9804 Frame
9122	Pin (back).	9304 Needle Bar Driving Lever.	9419 Needle Bar	9609 Spring.	9805 Eccentric
9123	Connecting Rod End (back).	9305 Spring Stead Pin.	9420 Needle Bar Clamp.	9610 Spring Screw.	9806 Eccentric Thumb Screw.
9124	Eeccentric Stud.	9306 Spool Pin.	9421 Needle Clamping Screw.	9611 Gear Box.	9807 Pulley
		9307 Cam Roller and Stud.	9422 Clamp Screw.	9612 Pinion Bushing.	9808 Rubber Ring
		9308 Joint Pin.		9613 Rack (short).	Spindle.
		9309 Oil Cup Screw.		9614 Pinion Screw.	
	HEAD DR MACHINE AND TENSIONS COMPLETE	9310 Oil Cup with 8597 and 8695 Spring		9615 Driving Pinion.	
		9311 Oil Pad (cloth)		9616 Rack (long).	
9201	Screw.	9312 Vibrating Presser Lifting lever (for medium work).		9617 Pinion Cover Plate.	ACCESSORIES
9202	Thread Eyelet (head of arm).	9313		9618 Plate Screw (2).	Oiler.
9203	Friction Spring.	9314 Lifting Lever Screw.	FOOT BAR AND FOOT BAR REVOLVING JOINT	9619 Needle Plate (medium and coarse needle holes).	9851 Oiler.
9204	Clamping Screw.	9315 Thumb Screw.		9620 Following Pinion Stud	9855 Screw Driver (machine).
9205	Lifting Lever Shaft Lever.	9320 Arm Side Cover (back)		9621 Gear Box Position Pin.	9856 Screw Driver (shuttle tension).
9206	Lifting Lever Shaft.	9321 Hand Wheel Hub Complete,		9622 Releasing Lever Hinge Pin	9857 Machine Screw (for fastening Machine to Power Table)(4).
9207	Lifting Lever Shaft Adjusting Lever	Nos. 11663, 81869, 82008 and 82052 for use when Hand Wheel is fitted on front of Machine.	9501 Adjusting Nut.	9623 Releasing Lever	9859 Machine Screw (for Fastening Machine to Stand)(4).
9208	Clamping Screw.		9502 Spring Bar.	9624 Locating Plunger.	9863 Threading Wire.
9209	Hinge Screw.		9503 Vibrating Presser Spring.	9625 Needle Plate Hinge Pin Binding Screw.	
9210	Tension Thumb Nut (2).	9322 Hand Wheel Shaft Gear.	9504 Foot Bar		
9211	Tension Spring.	9323 Gear Pin	9505 Collar Screw.	9626 Plunger Spring.	
9212	Adjusting Stud (top).	9324 Shaft.	9506 Spring Bar Collar.	9627 Following Pinion.	
		9325 Hub.	9507 Feeding Foot Screw	9628 Gear Box Screw (2)	
			9508 Feeding Foot.	9629 Connecting Rod Hinge Screw.	