



A. GH 8365 本體機構 FRAME & MISCELLANEOUS COVER COMPONENTS

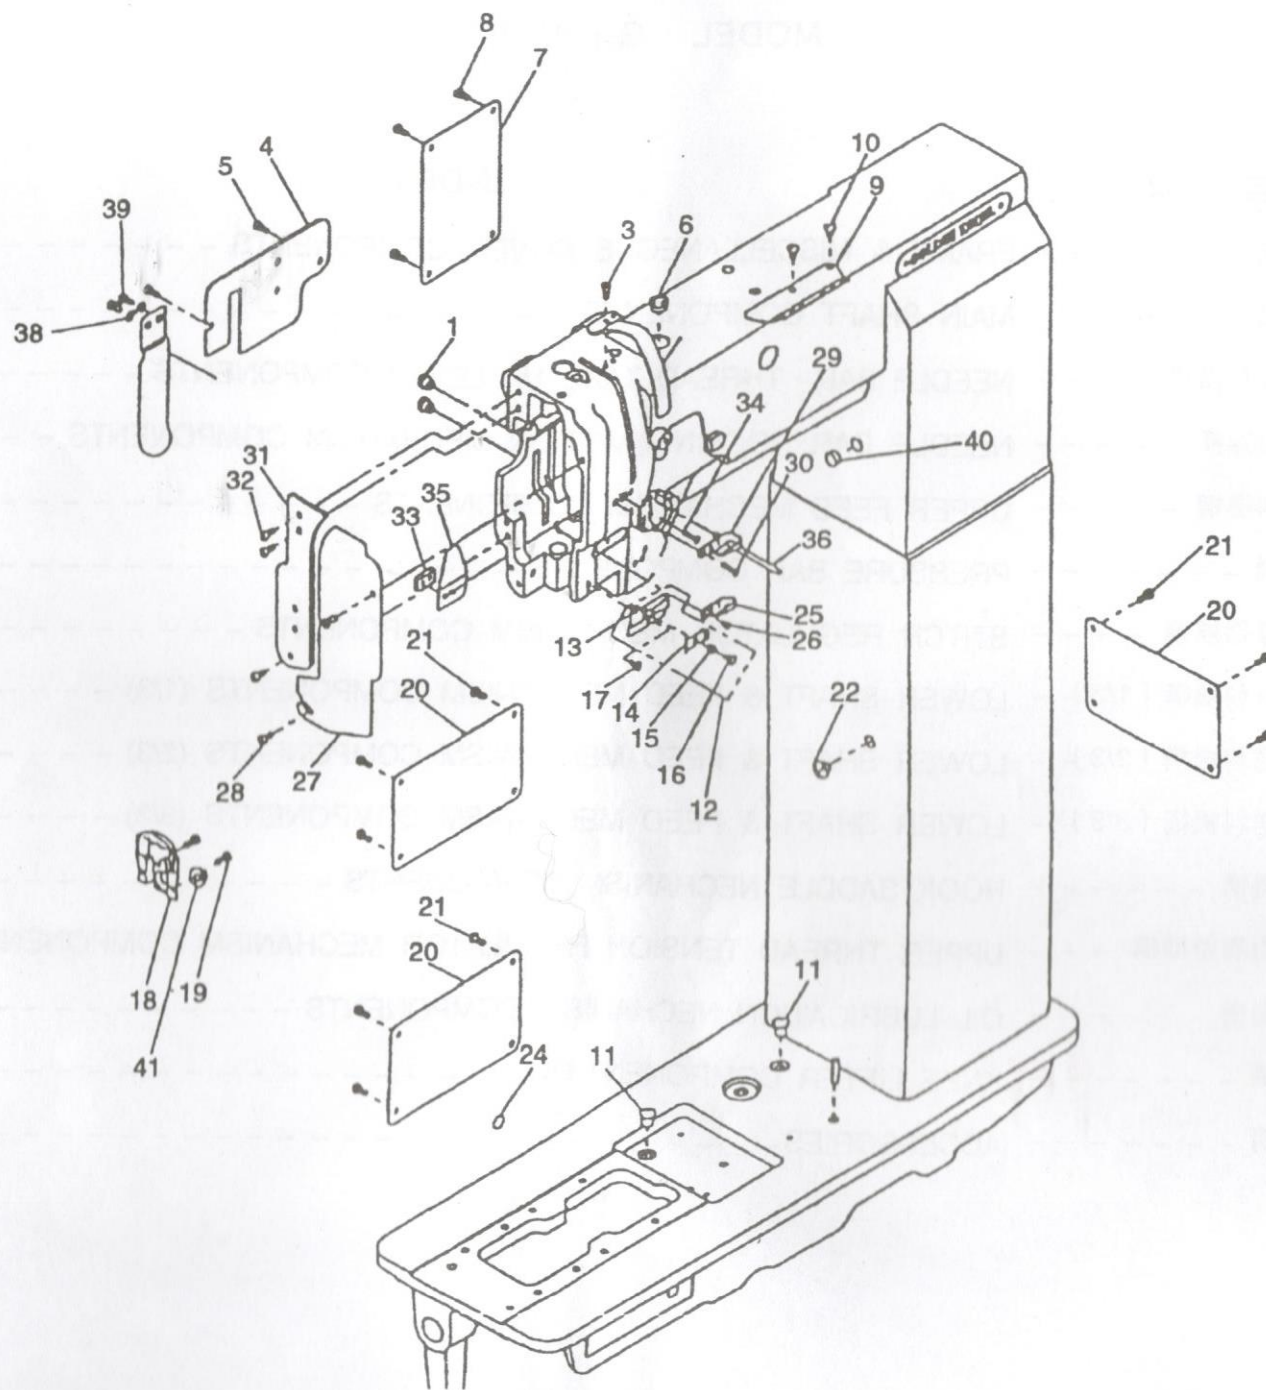

A. GH 8365 本體機構 FRAME & MISCELLANEOUS COVER COMPONENTS

零件號碼	零件名稱	件數	備 注
Part No.	Name of Part	Q'TY	Remarks
A-1	橡膠塞 - - - - - Rubber Plug - - - - -	2	
A-2	天枰護蓋 - - - - - Thread Take-up Cover - - - - -	1	
A-3	螺絲 - - - - - Screw 11/64 - 40 * 8 - - - - -	1	
A-4	橫蓋 - - - - - Arm Cover - - - - -	1	
A-5	螺絲 - - - - - Screw 11/64 - 40 * 8 - - - - -	2	
A-6	上蓋 - - - - - Plug - - - - -	1	
A-7	側板 - - - - - Arm Cover - - - - -	1	
A-8	螺絲 - - - - - Screw 11/64 - 40 * 8 - - - - -	4	
A-9	綫挂 - - - - - Thread Guide - - - - -	1	
A-10	螺絲 - - - - - Screw 11/64 - 40 * 8 - - - - -	2	
A-11	油蓋 - - - - - Cap - - - - -	2	
A-12	綫挂 (套) - - - - - Thread Guide Asm - - - - -	1	
A-13	壓綫具 - - - - - Thread Guide - - - - -	(1)	
A-14	彈簧 - - - - - Guide Plate - - - - -	(1)	
A-15	螺絲 - - - - - Spring - - - - -	(1)	
A-16	螺絲 - - - - - Screw 1/8 - 44 * 6.8 - - - - -	(1)	
A-17	針板 - - - - - Screw 9/64 - 40 * 6.5 - - - - -	1	
A-18	螺絲 - - - - - Throat Plate - - - - -	1	
A-19	測板 - - - - - Screw 11/64 - 40 * 8 - - - - -	2	
A-20	螺絲 - - - - - Arm Cover - - - - -	2	
A-21	橡膠塞 - - - - - Screw 11/64 - 40 * 8 - - - - -	8	
A-22	油管 - - - - - Rubber Plug - - - - -	1	
A-23	印記 - - - - - Oil Pipe - - - - -	1	
A-24	綫挂 - - - - - Grand Mark - - - - -	1	
A-25	螺絲 - - - - - Thread Guide - - - - -	1	
A-26	面板 - - - - - Screw 9/64 - 40 * 6.5 - - - - -	1	
A-27	螺絲 - - - - - Face Plate - - - - -	1	
A-28	綫挂 - - - - - Screw 11/64 - 40 * 8 - - - - -	2	
A-29	螺絲 - - - - - Thread Guide - - - - -	1	
A-30	綫挂 - - - - - Screw 3/16 - 28 * 11 - - - - -	1	
A-31	螺絲 - - - - - Guide mounting Plate - - - - -	1	
A-32	面板 - - - - - Screw 11/64 - 40 * 8 - - - - -	3	
A-33	螺絲 - - - - - Spaser - - - - -	1	
A-34	螺帽板 - - - - - Screw 3/16 - 28 * 11 - - - - -	1	
A-35	螺絲 - - - - - Oil Guard Plate - - - - -	1	
A-36	油防板 - - - - - Tension releasing Pin - - - - -	1	
A-37	綫銷 - - - - - Cover - - - - -	1	
A-38	防塵蓋 - - - - - Washer 4.5 - - - - -	2	
A-39	平墊圈 - - - - - Screw 11/64 - 40 * 8 - - - - -	2	
A-40	螺絲 - - - - - Rubber Plug - - - - -	1	
A-41	橡膠塞 - - - - - Washer - - - - -	2	


B. GH 8365 上軸機構 MAIN SHAFT COMPONENTS

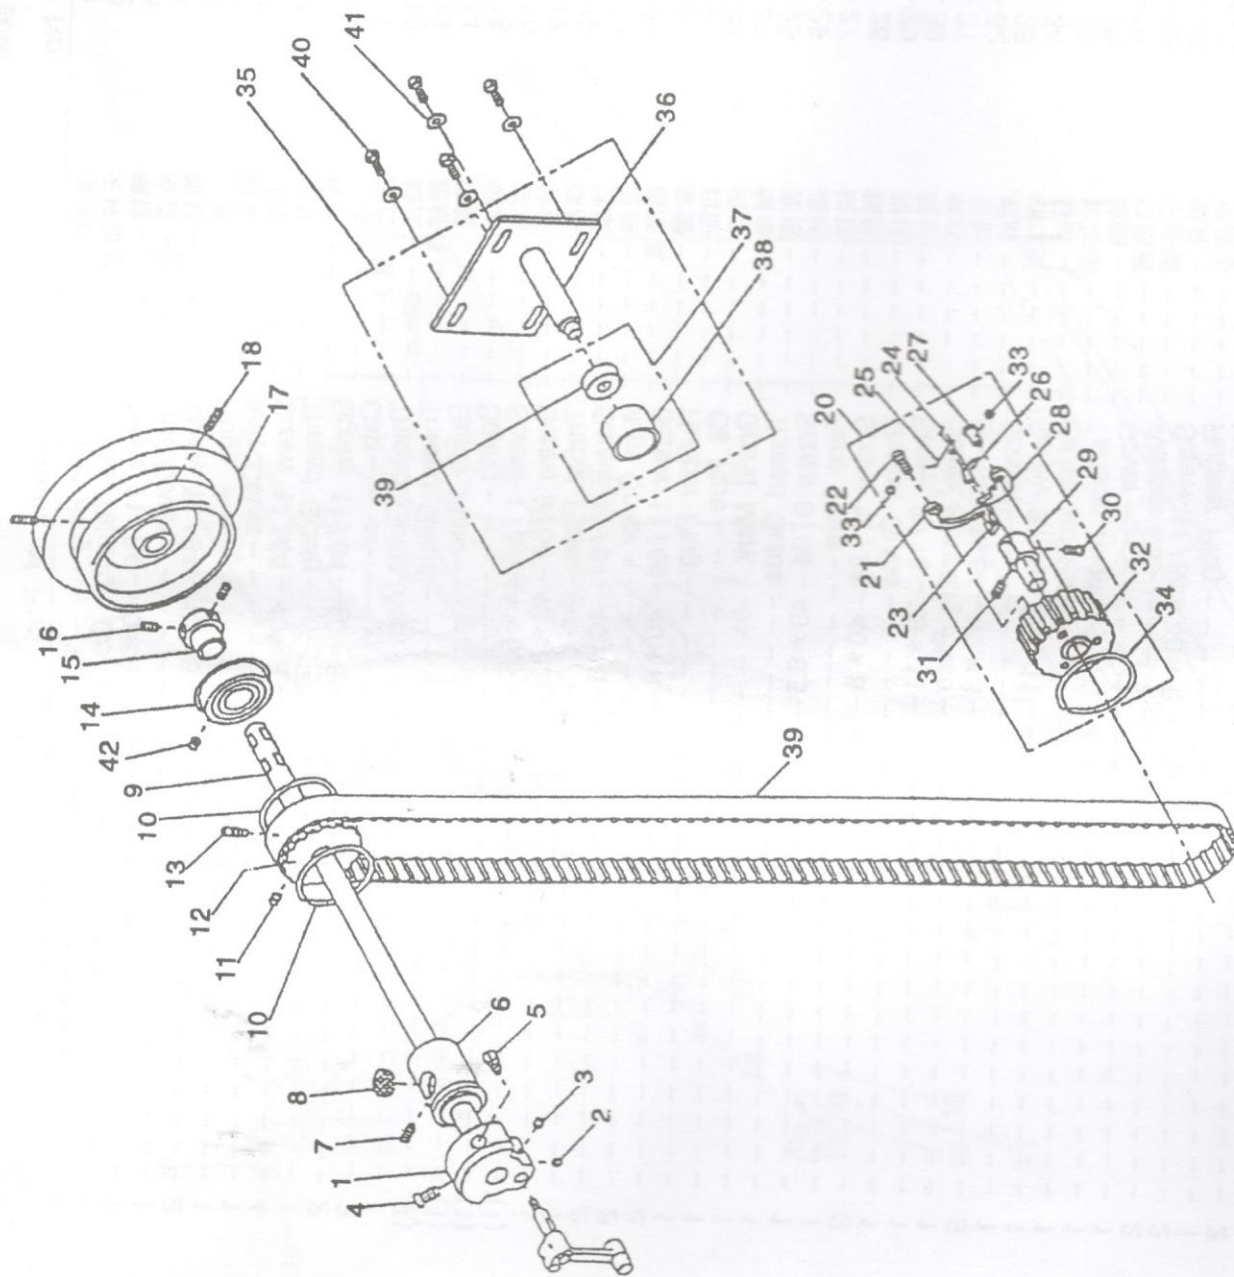

B. GH 8365 上軸機構 MAIN SHAFT COMPONENTS

零件號碼	零件名稱	件數	備 注
Part No.	Name of Part	Q'TY	Remarks
B-1	凸輪 - - - - -	Crank - - - - -	1
B-2	螺絲 - - - - -	Screw 15/64-28*3 - - - - -	1
B-3	螺絲 - - - - -	Screw 15/64-28*8.5 - - - - -	1
B-4	螺絲 - - - - -	Screw 9/32-28*13 - - - - -	1
B-5	螺絲 - - - - -	Screw 9/32-28*9.5 - - - - -	1
B-6	上軸套筒 (前) - -	Arm Shaft Bushing (Left Front-side) - - - - -	1
B-7	螺絲 - - - - -	Screw 1/4-24*13 - - - - -	1
B-8	油棉 - - - - -	Felt - - - - -	1
B-9	上軸 - - - - -	Arm Shaft - - - - -	1
B-10	齒輪邊環 - - - -	Spring Flange - - - - -	2
B-11	螺絲 - - - - -	Screw 15/64-28*8.5 - - - - -	1
B-12	齒形皮帶輪 (上) -	Belt Pulley (Upper) - - - - -	1
B-13	螺絲 - - - - -	Screw 15/64-28*9 - - - - -	1
B-14	滾珠軸承 - - - -	Ball Bearing - - - - -	1
B-15	套管 - - - - -	Bushing - - - - -	1
B-16	螺絲 - - - - -	Screw 15/64-28*8.5 - - - - -	2
B-17	皮帶輪 - - - - -	Balance Wheel - - - - -	1
B-18	螺絲 - - - - -	Screw 15/64-28*12 - - - - -	2
B-19	齒形皮帶 - - - -	Cog belt - - - - -	1
B-20	齒形皮帶輪 (套) -	Belt Pulley Asm.(Lower) - - - - -	1
B-21	彈片壓板 - - - -	Spring plate - - - - -	(1)
B-22	偏心固定鎖 - - -	Pin ϕ 6*14.5 - - - - -	(1)
B-23	連接杆 - - - - -	Link - - - - -	(1)
B-24	開口銷 - - - - -	Split Pin 1*10 - - - - -	(1)
B-25	離合器彈簧 - - -	Twist Spring - - - - -	(1)
B-26	離合器棘 - - - -	Plate - - - - -	(1)
B-27	固定銷 - - - - -	Pin ϕ 6.35*13 - - - - -	(1)
B-28	離合器棘 - - - -	Plate - - - - -	(1)
B-29	套管 - - - - -	Bushing - - - - -	(1)
B-30	螺絲 - - - - -	Screw 15/64-28*10.5 - - - - -	(1)
B-31	螺絲 - - - - -	Screw 15/64-28*8.5 - - - - -	(1)
B-32	齒形皮帶輪 - - -	Belt pulley (Lower) - - - - -	(1)
B-33	螺絲 - - - - -	Screw 15/64-28*4.5 - - - - -	(2)
B-34	齒輪邊環 - - - -	Spring Flange - - - - -	(1)
B-35	惰輪座 (套) - - -	Idler Base Asm. - - - - -	1
B-36	惰輪座 (結合) - -	Idler Base Com. - - - - -	(1)
B-37	惰輪 (結合) - - -	Idler Com. - - - - -	(1)
B-38	惰輪 - - - - -	Idler - - - - -	(1)
B-39	滾珠軸承 - - - -	Ball Bearing - - - - -	(1)
B-40	螺絲 - - - - -	Screw 15/64-28*14 - - - - -	4
B-41	平墊圈 - - - - -	Washer 6 - - - - -	4
B-42	螺絲 - - - - -	Screw 1/4-24*7.5 - - - - -	1


C. GH 8365 針棒・天秤機構 NEEDLE BAR・TREAD TAKE-UP LEVER COMPONENTS

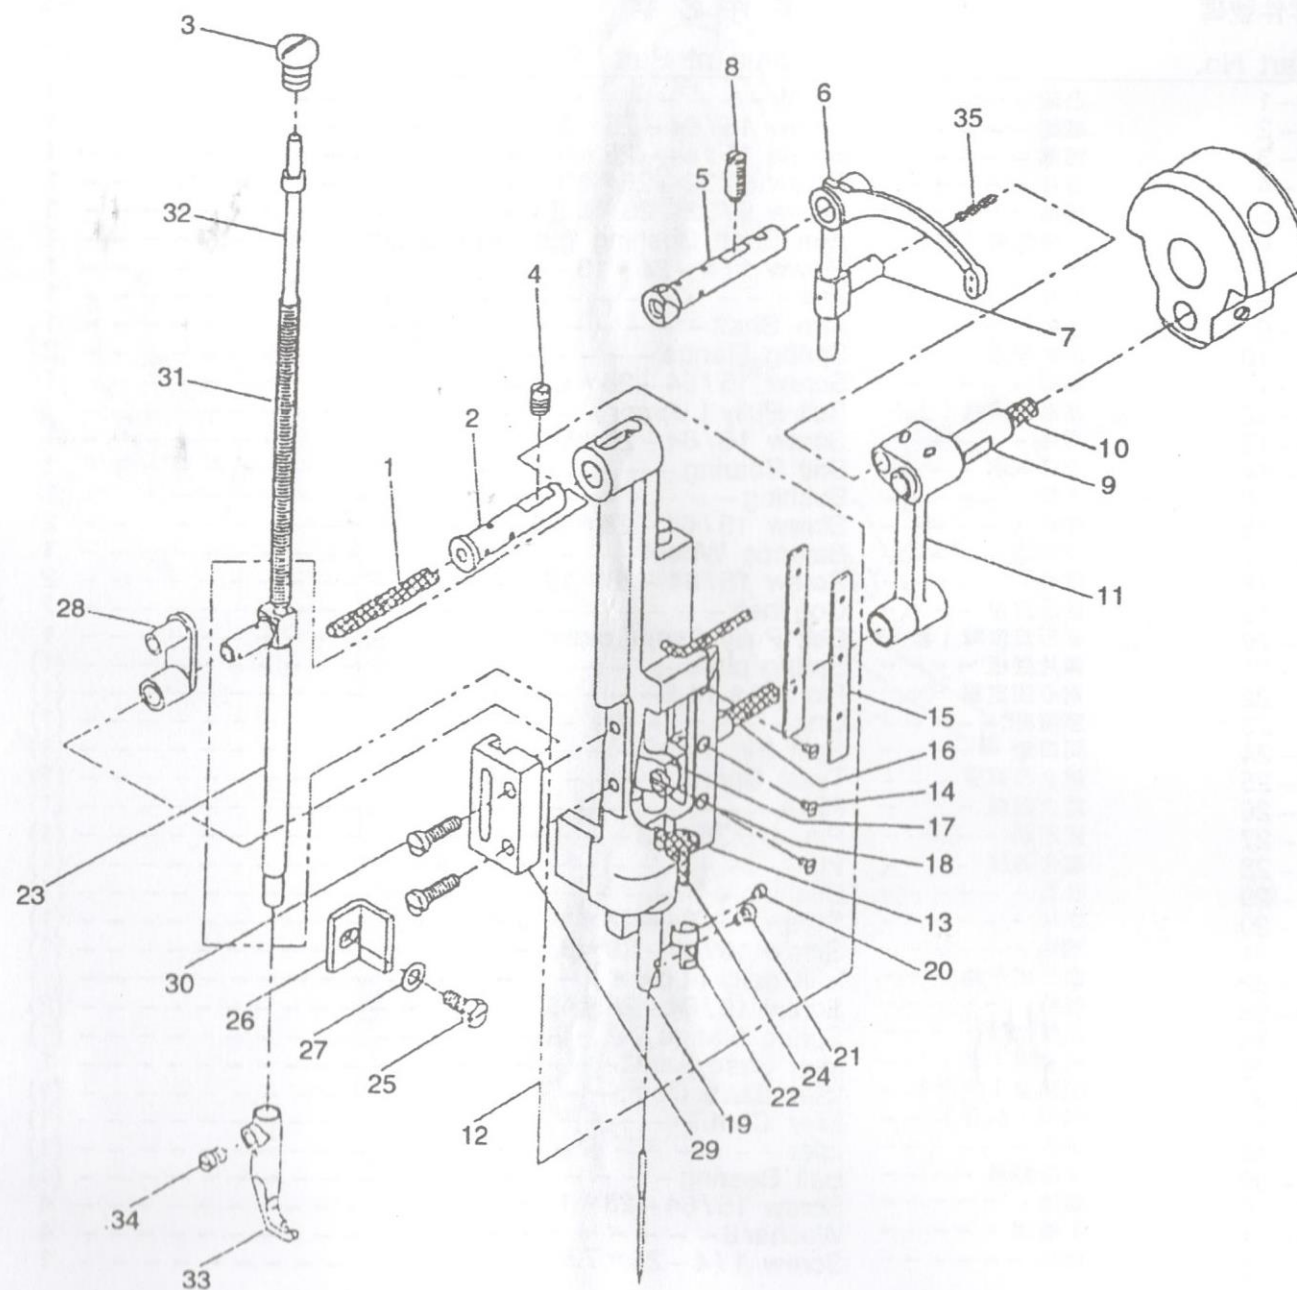

C. GH 8365 針棒・天秤機構 NEEDLE BAR・TREAD TAKE-UP LEVER COMPONENTS

零件號碼	零件名稱	件數	備 注
Part No.	Name of Part	Q'TY	Remarks
C-1	油綫----- Oil Wick ϕ 2.5*80-----	1	
C-2	針柱座固定軸--- Needle Bar Guide Bracket Stud-----	1	
C-3	螺絲----- Screw 5/16-28*10-----	1	
C-4	螺絲----- Screw 15/64-28*8.5-----	1	
C-5	天秤固定銷---- Thread Take-up Lever Support Stud-----	1	
C-6	天秤----- Thread Take-up Lever-----	1	
C-7	天秤滑塊----- Thread Take-up Slide Block-----	1	
C-8	螺絲----- Screw 15/64-28*8.5-----	1	
C-9	凸輪固定銷---- Needle Bar Crank Pin-----	1	
C-10	油綫----- Oil Wick ϕ 3.0*65-----	1	
C-11	連接杆----- Connecting Link-----	1	
C-12	針柱壹(套)--- Needle Bar Guide Bracket Asm.-----	1	
C-13	針柱壹----- Needle Bar Guide Bracket-----	(1)	
C-14	螺絲----- Screw 3/32-56*4-----	(6)	
C-15	針棒連接器滑板- Spacer-----	(2)	
C-16	油棉----- Felt-----	(1)	
C-17	針棒固定軸---- Needle Bar Holder-----	(1)	
C-18	螺絲----- Screw 9/64-40*8.5-----	(1)	
C-19	針棒----- Needle Bar-----	(1)	
C-20	螺絲----- Screw 3/32-56*3-----	(1)	
C-21	螺絲----- Screw 1/8-44*3-----	(1)	
C-22	綫挂----- Needle Bar Thread Guide-----	(1)	
C-23	中腳押棒----- Vibrating Presser Bar-----	(1)	
C-24	油綫----- Oil Wick ϕ 2.5*200-----	(1)	
C-25	螺絲----- Screw 11/64-40*10-----	1	
C-26	針柱座定位板--- Needle Bar Guide-----	1	
C-27	平墊圈----- Washer 5-----	1	
C-28	押腳攀升連連杆- Vibrating Presser Bar Link-----	1	
C-29	押腳攀升連連杆案内- Vibrating Presser Bar Guide-----	1	
C-30	螺絲----- Screw 11/64-40*15-----	2	
C-31	彈簧----- Spring-----	1	
C-32	彈簧導杆----- Vibrating Presser Spring Guide-----	1	
C-33	內壓腳----- Walking Foot-----	1	
C-34	螺絲----- Screw 11/64-40*5-----	1	
C-35	油綫----- Oil Wick ϕ 3*27-----	1	


D. GH 8365 針棒搖擺機構 NEEDLE BAR ROCKING MOTION MECHANISM COMPONENTS

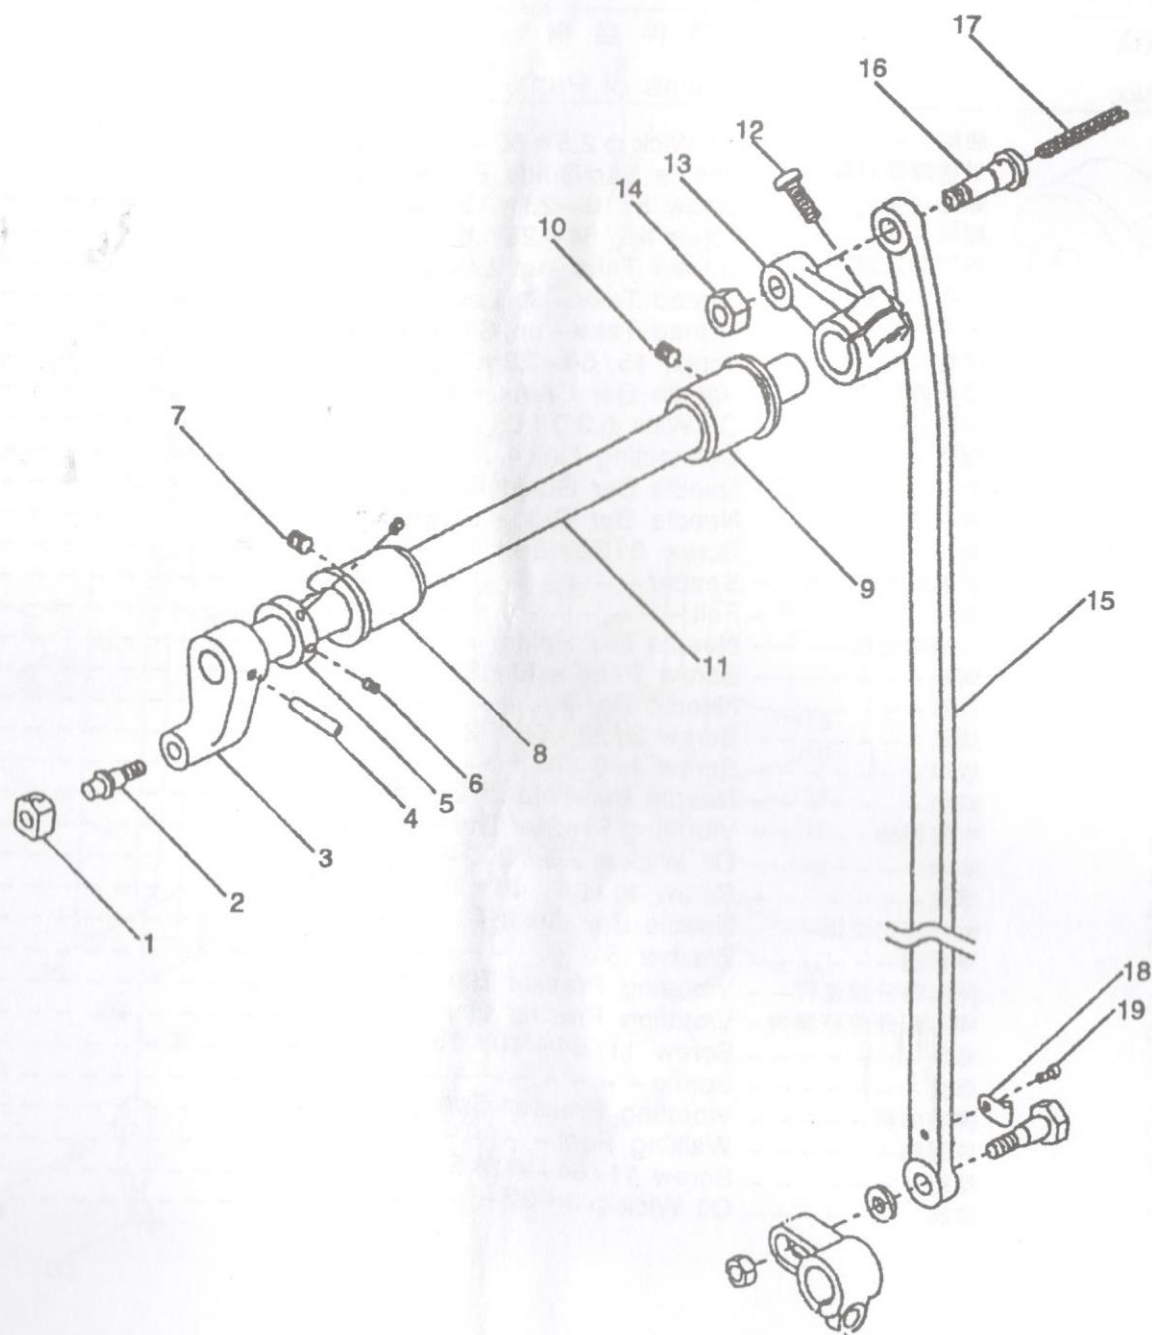

D. GH 8365 針棒搖擺機構 NEEDLE BAR ROCKING MOTION MECHANISM COMPONENTS

零件號碼	零件名稱	件數	備 注
Part No.	Name of Part	Q'TY	Remarks
D-1	角駒 - - - - - Square Block - - - - -	1	
D-2	角駒軸 - - - - - Crank Pin - - - - -	1	
D-3	擺動臂 - - - - - Needle Bar Vibrating Crank (Left) - - - - -	1	
D-4	推拔銷 - - - - - Taper Pin $\phi 4 \times 23 \times 1/5$ - - - - -	1	
D-5	定環 - - - - - Coller - - - - -	1	
D-6	螺絲 - - - - - Screw 11/64-40*5.5 - - - - -	2	
D-7	螺絲 - - - - - Screw 1/4-24*8 - - - - -	1	
D-8	擺動臂軸套管 - - - Needle Bar Vibrating Shaft Bushing (Front) - - - - -	1	
D-9	擺動臂軸套管 - - - Needle Bar Vibrating Shaft Bushing (Rear) - - - - -	1	
D-10	螺絲 - - - - - Screw 1/4-24*8 - - - - -	1	
D-11	擺動臂軸 - - - - - Needle Bar Vibrating Shaft - - - - -	1	
D-12	螺絲 - - - - - Screw 1/4-24*16 - - - - -	1	
D-13	擺動臂 - - - - - Needle Bar Vibrating Crank (Rigit) - - - - -	1	
D-14	螺帽 - - - - - Nut 5/16-24 - - - - -	1	
D-15	連接杆 - - - - - Connecting Rod - - - - -	1	
D-16	螺絲 - - - - - Hinge Screw - - - - -	1	
D-17	油綫 - - - - - Oil Wick $\phi 2.5 \times 85$ - - - - -	1	
D-18	油綫支持片 - - - - - Holder - - - - -	1	
D-19	螺絲 - - - - - Screw 9/64-40*6.5 - - - - -	1	


E. GH 8365 上部送料機構 UPPER FEED MECHANISM COMPONENTS

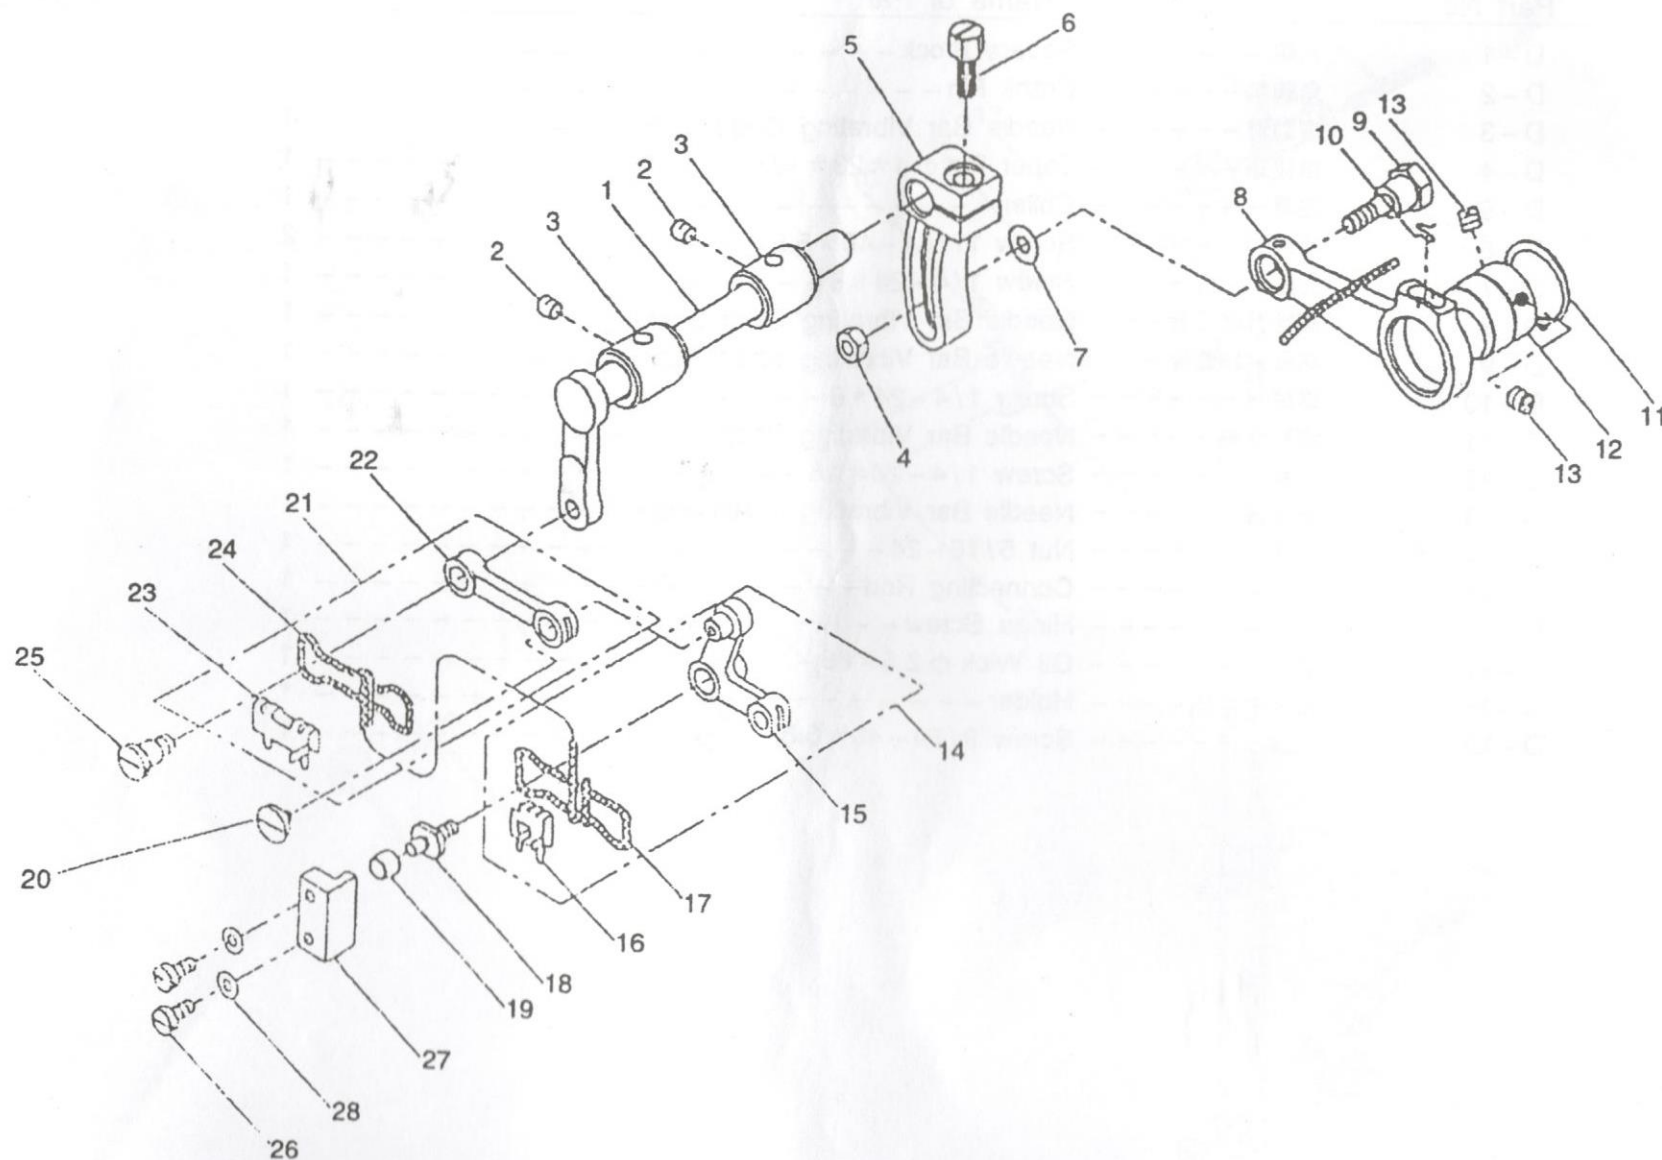

E. GH 8365 上部送料機構 UPPER FEED MECHANISM COMPONENTS

零件號碼	零件名稱	件數	備 注
Part No.	Name of Part	Q'TY	Remarks
E-1	作動軸 - - - - - Feed Lifting Rock Shaft - - - - -	1	
E-2	螺絲 - - - - - Screw 1/4-24*8 - - - - -	2	
E-3	套管 - - - - - Bushing - - - - -	2	
E-4	螺帽 - - - - - Nut M6*0.75 - - - - -	1	
E-5	攀升曲柄連杆 - - - Lever (Light) - - - - -	1	
E-6	螺絲 - - - - - Screw 1/4-24*16 - - - - -	1	
E-7	平墊圈 - - - - - Washer 6 - - - - -	1	
E-8	連接杆 - - - - - Connecting Rod - - - - -	1	
E-9	螺絲 - - - - - Hinge Screw - - - - -	1	
E-10	彈簧 - - - - - Spring - - - - -	1	
E-11	軸用C扣環25 - - - Retaining Rings-C Type 25 - - - - -	1	
E-12	偏心輪 - - - - - Eccentric - - - - -	1	
E-13	螺絲 - - - - - Screw 1/4-40*7 - - - - -	2	
E-14	攀升支臂連杆 (套) Bell Crank Asm. - - - - -	1	
E-15	攀升支臂連杆 - - - Bell Crank - - - - -	(1)	
E-16	油綫挂架 - - - - - Holder - - - - -	(1)	
E-17	油綫 - - - - - Oil Wick - - - - -	(1)	
E-18	攀升連杆支軸 - - - Support Shaft - - - - -	1	
E-19	攀升曲臂案内珠 - - - Roller - - - - -	1	
E-20	螺絲 - - - - - Screw 11/64-32*6 - - - - -	1	
E-21	連接杆 (套) - - - Link Asm. - - - - -	1	
E-22	連接杆 (左) - - - Link (Left) - - - - -	(1)	
E-23	油挂綫架 - - - - - Holder - - - - -	(1)	
E-24	油綫 - - - - - Oil Wick - - - - -	(1)	
E-25	螺絲 - - - - - Hinge Screw - - - - -	1	
E-26	螺絲 - - - - - Screw 11/64-40*10 - - - - -	2	
E-27	案内板 - - - - - Bell Crank Guide - - - - -	1	
E-28	平墊圈 - - - - - Washer 5 - - - - -	2	

F. GH 8365 押脚機構 PRESSURE BAR COMPONENTS

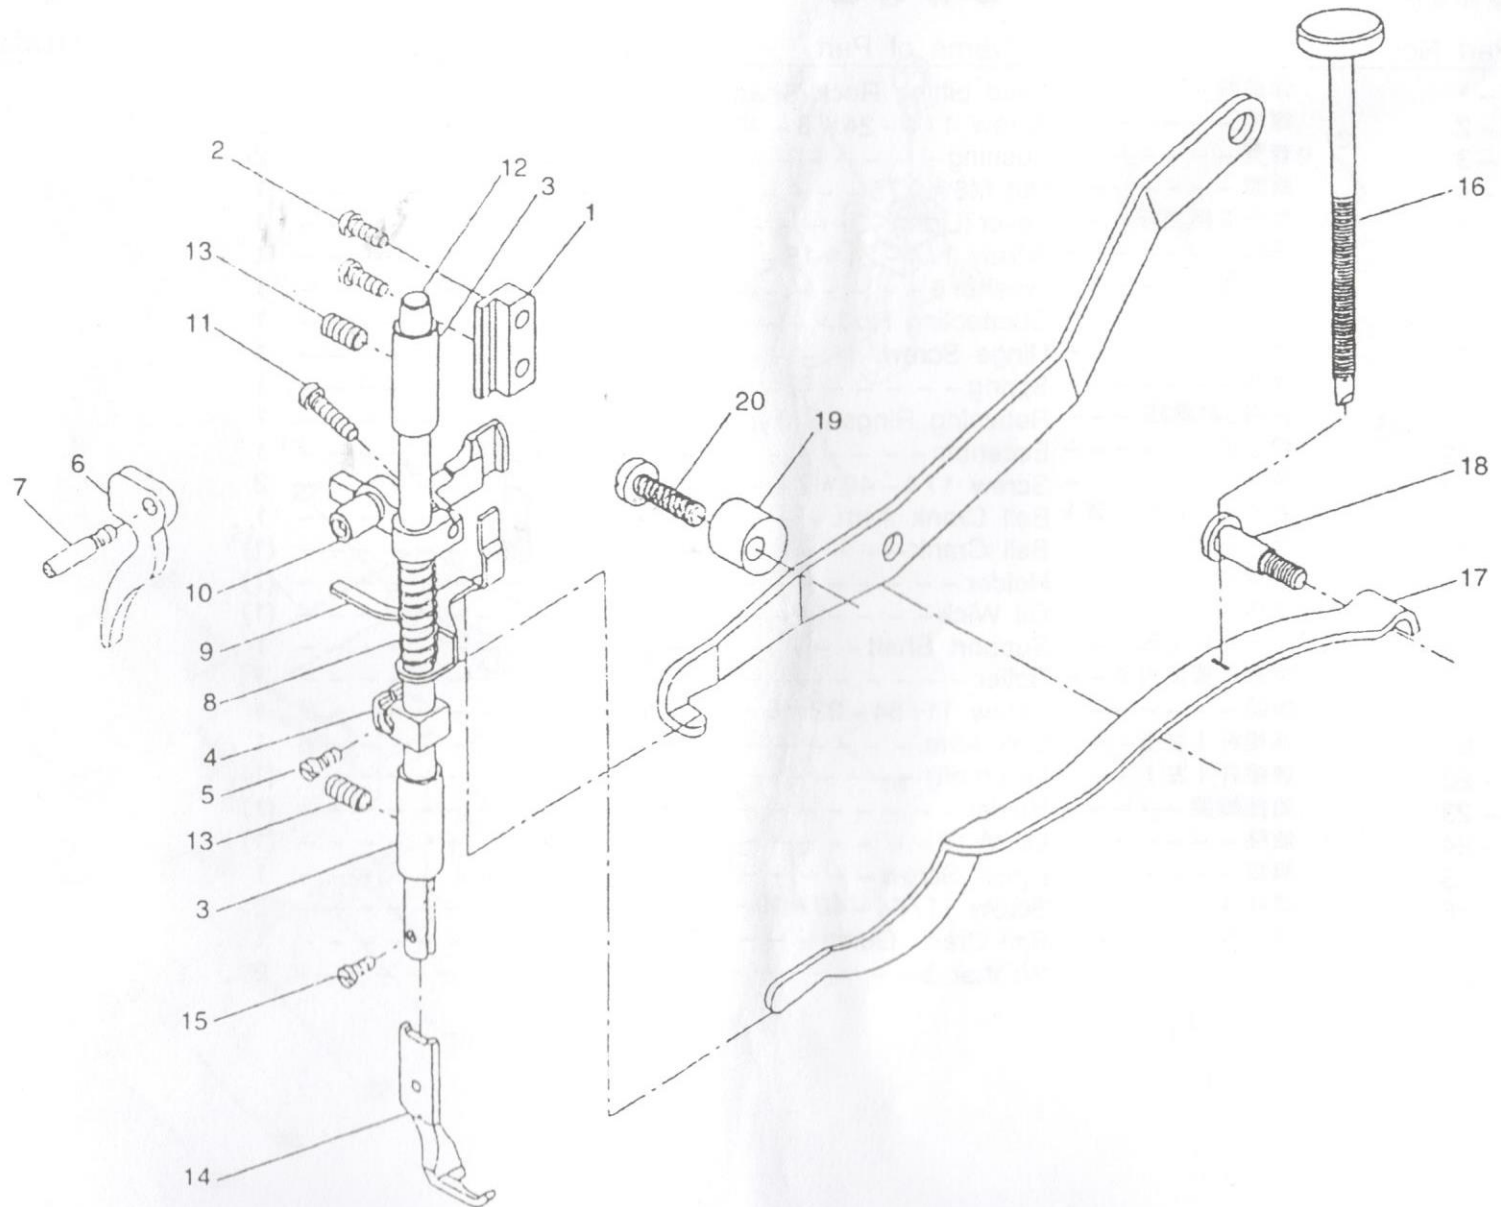


F. GH 8365 押脚機構 PRESSURE BAR COMPONENTS

零件號碼	零件名稱	件數	備 注
Part No.	Name of Part	Q'TY	Remarks
F-1	押棒上升架案内板 - Guide - - - - -	1	
F-2	螺絲 - - - - - Screw 11/64 - 40 * 12 - - - - -	2	
F-3	押棒套管 - - - - - Bushing - - - - -	2	
F-4	押棒彈簧架 - - - - - Spring Bracket - - - - -	1	
F-5	螺絲 - - - - - Screw 9/64 - 40 * 8.5 - - - - -	1	
F-6	押棒提升把手 - - - - - Pressure Bar Lifter - - - - -	1	
F-7	螺絲 - - - - - Screw 3/16 - 28 * 24.5 - - - - -	1	
F-8	彈簧 - - - - - Spring - - - - -	1	
F-9	壓縮滑座 - - - - - Thread Releasing Plate - - - - -	1	
F-10	押棒上升器 - - - - - Bracket - - - - -	1	
F-11	螺絲 - - - - - Screw 11/64 - 40 * 15 - - - - -	1	
F-12	押棒 - - - - - Presser Bar - - - - -	1	
F-13	螺絲 - - - - - Screw 1/4 - 24 * 13 - - - - -	2	
F-14	外壓脚 - - - - - Presser Foot - - - - -	1	
F-15	螺絲 - - - - - Screw 9/64 - 40 * 11 - - - - -	1	
F-16	螺絲 - - - - - Screw 1/4 - 40 * 104 - - - - -	1	
F-17	板彈簧 - - - - - Lever Spring - - - - -	1	
F-18	螺絲 - - - - - Hinge Screw - - - - -	1	
F-19	固定銷 - - - - - Stopper - - - - -	1	
F-20	螺絲 - - - - - Screw 1/4 - 24 * 25 - - - - -	1	

G. GH 8365

縫目調整器機構


STITCH REGULATOR MECHANISM COMPONENTS

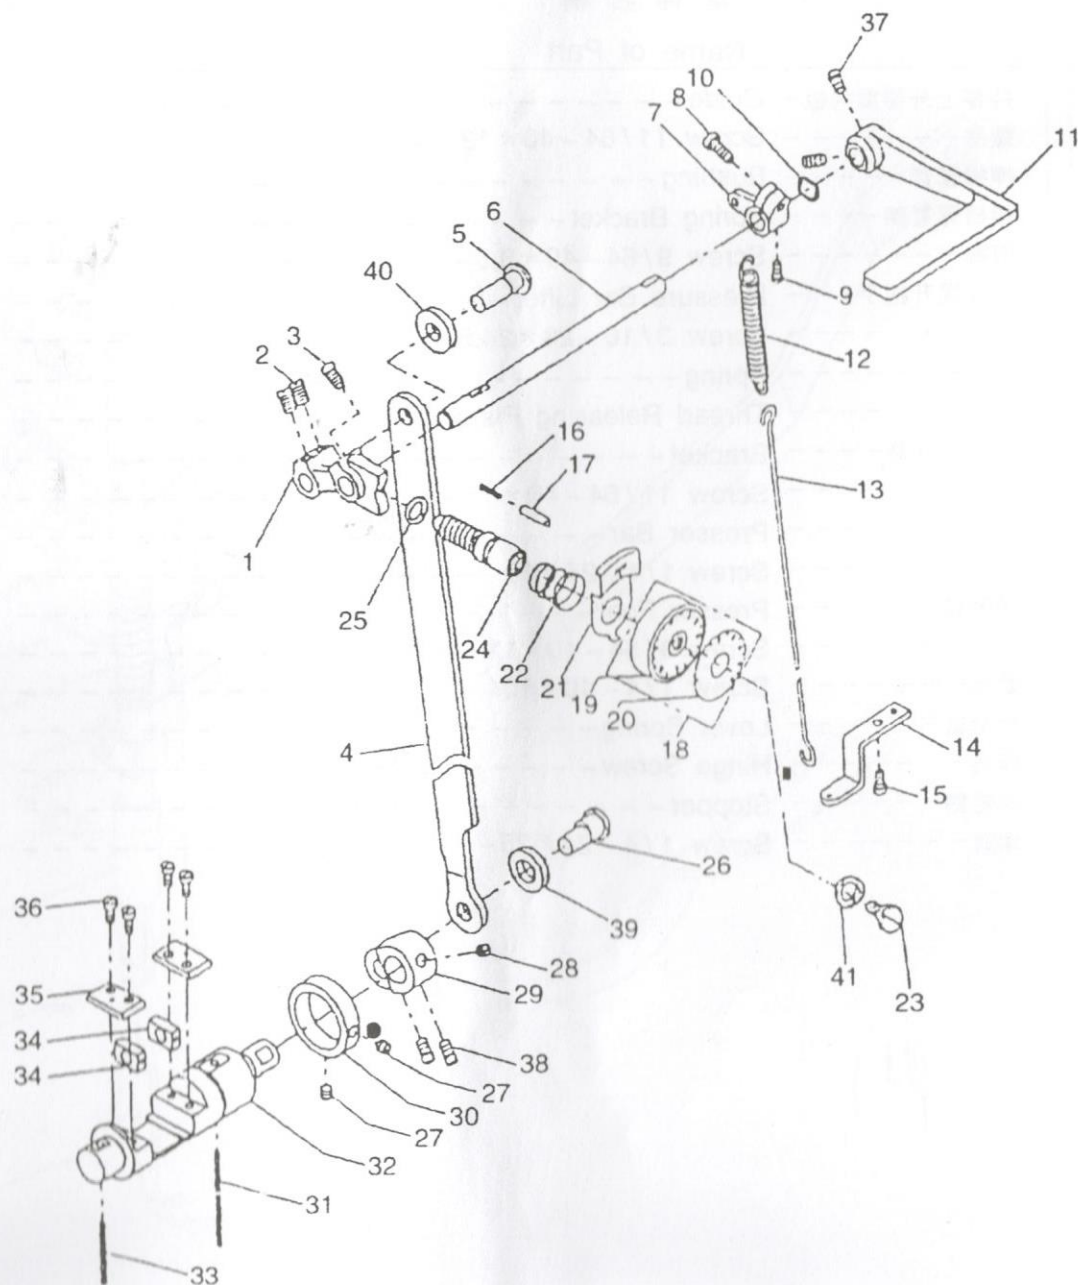

G. GH 8365 縫目調整器機構 STITCH REGULATOR MECHANISM COMPONENTS

零件號碼	零件名稱	件數	備 注
Part No.	Name of Part	Q'TY	Remarks
G-1	三又 - - - - - Feed Regulator Cam - - - - -	1	
G-2	螺絲 - - - - - Screw 15/64-28*8.5 - - - - -	2	
G-3	螺絲 - - - - - Screw 15/64-28*12 - - - - -	1	
G-4	連接杆 - - - - - Link - - - - -	1	
G-5	連結軸 - - - - - Eccentric Shaft - - - - -	1	
G-6	倒縫軸 - - - - - Reverse Stitch Shaft - - - - -	1	
G-7	倒縫軸腕 - - - - - Arm - - - - -	1	
G-8	螺絲 - - - - - Screw 15/64-28*13 - - - - -	1	
G-9	螺絲 - - - - - Screw 11/64-40*8.5 - - - - -	1	
G-10	彈簧墊圈 - - - - - Spring Washer 10 - - - - -	1	
G-11	倒縫杆 - - - - - Reverse Sewing Lever - - - - -	1	
G-12	彈簧 - - - - - Spring - - - - -	1	
G-13	彈簧挂 - - - - - Spring Hook - - - - -	1	
G-14	支持板 - - - - - Guide Plate - - - - -	1	
G-15	螺絲 - - - - - Screw 11/64-40*8 - - - - -	1	
G-16	彈簧 - - - - - Spring - - - - -	1	
G-17	定位銷 - - - - - Pin - - - - -	1	
G-18	刻度盤 (套) - - - - - Dial Asm. - - - - -	1	
G-19	刻度盤 - - - - - Dial - - - - -	(1)	
G-20	刻度板 - - - - - Feed Scale Plate - - - - -	(1)	
G-21	操作板 - - - - - Stoper Pin Releasing Lever - - - - -	1	
G-22	彈簧 - - - - - Spring - - - - -	1	
G-23	螺絲 - - - - - Screw 3/16-28*15 - - - - -	1	
G-24	方牙棒 - - - - - Feed Regulating Screw - - - - -	1	
G-25	O型環10 - - - - - O-ring ϕ 10 - - - - -	1	
G-26	倒縫連結軸 - - - - - Pin - - - - -	1	
G-27	螺絲 - - - - - Screw 15/64-28*6 - - - - -	2	
G-28	螺絲 - - - - - Screw 15/64-28*6 - - - - -	1	
G-29	倒縫軸連結腕 - - - - - Reverse Sewing Crank - - - - -	1	
G-30	固定環 - - - - - Collar - - - - -	1	
G-31	油綫 - - - - - Oil Wick ϕ 3*55 - - - - -	1	
G-32	倒退固定軸 - - - - - Reverse Block - - - - -	1	
G-33	油綫 - - - - - Oil Wick ϕ 3*55 - - - - -	1	
G-34	滑駒 - - - - - Square Block - - - - -	2	
G-35	滑塊固定板 - - - - - Guide Plate - - - - -	2	
G-36	螺絲 - - - - - Screw 11/64-40*10 - - - - -	4	
G-37	螺絲 - - - - - Screw 15/64-28*8.5 - - - - -	2	
G-38	螺絲 - - - - - Screw 15/64-28*8.5 - - - - -	2	
G-39	墊圈 - - - - - Spacer - - - - -	1	
G-40	墊圈 - - - - - Spacer - - - - -	1	
G-41	墊片 - - - - - Washer - - - - -	1	


H. GH 8365 下軸・送料機構 LOWER SHAFT & FEED MECHANISM COMPONENTS (1/3)

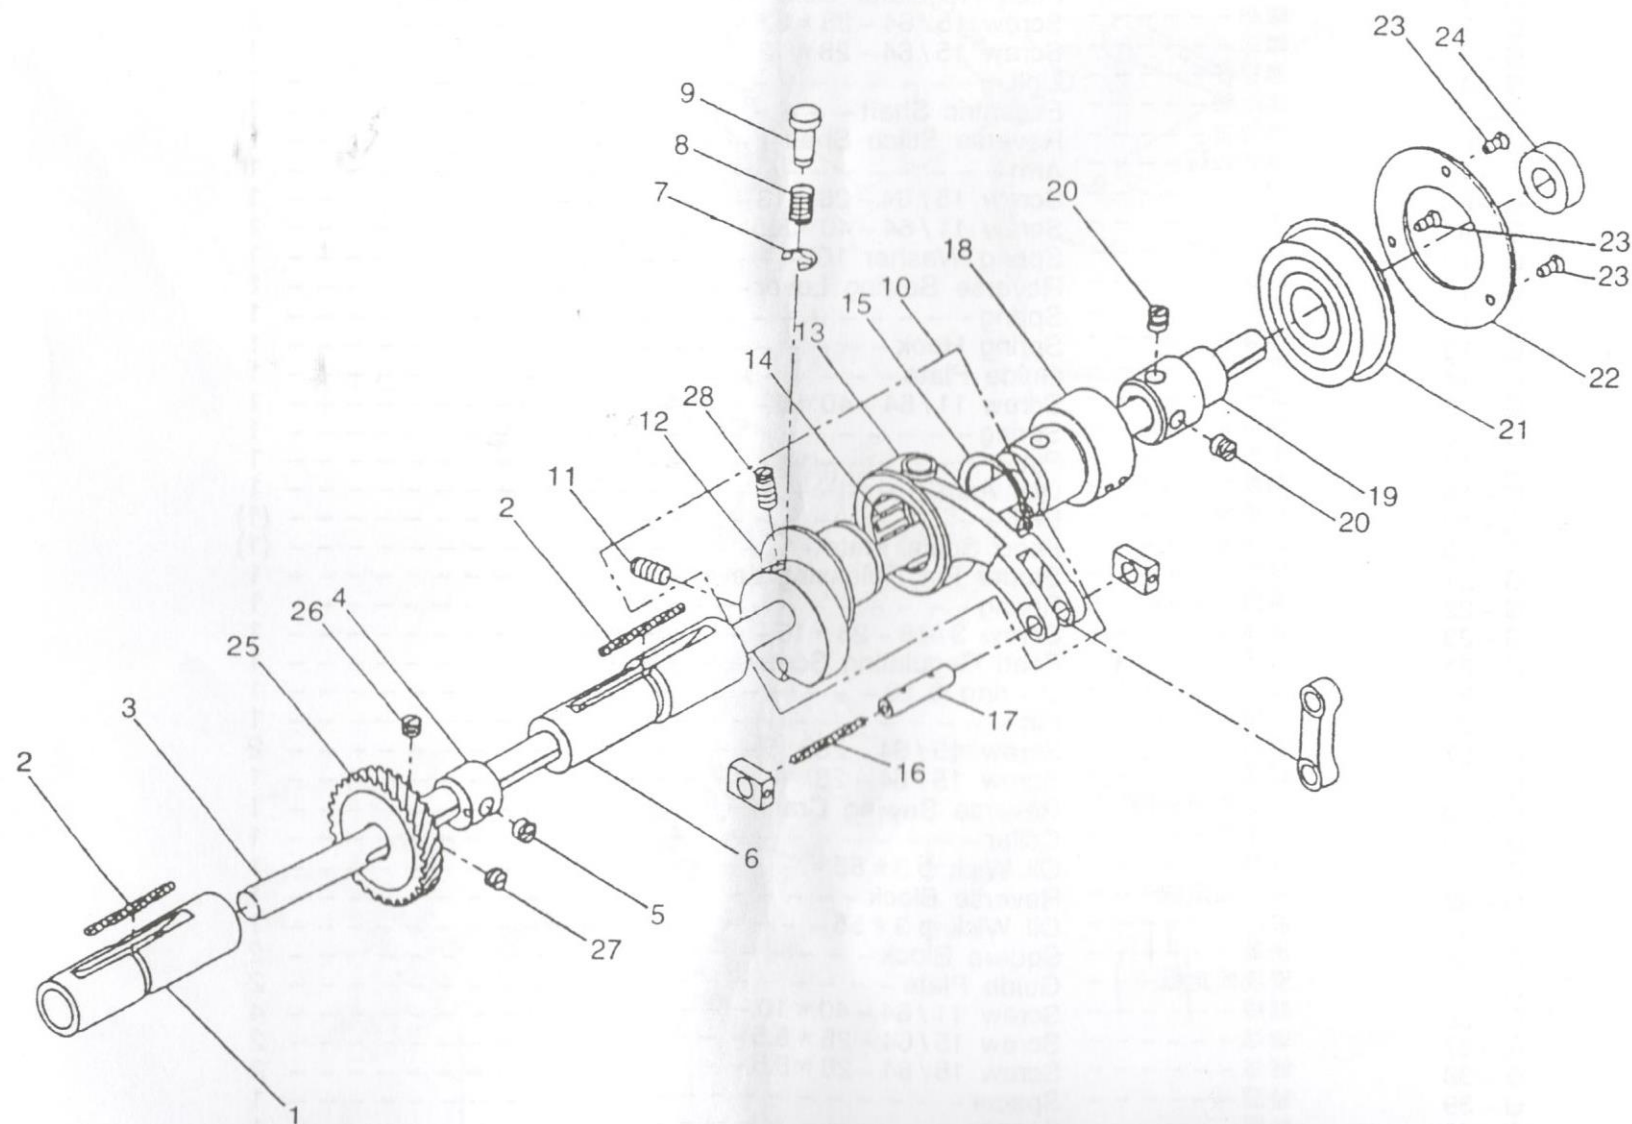

H. GH 8365 下軸・送料機構 LOWER SHAFT & FEED MECHANISM COMPONENTS (1/3)


零件號碼	零件名稱	件數	備 注
Part No.	Name of Part	Q'TY	Remarks
H-1	套管 - - - - - Bushing (Lower Shaft Left-side) - - - - -	1	
H-2	油綫 - - - - - Oil Wick - - - - -	2	
H-3	下軸 - - - - - Lower Shaft - - - - -	1	
H-4	送料土壹凸輪 - - - Feed Eccentric Cam - - - - -	1	
H-5	螺絲 - - - - - Screw 1/4-40*5 - - - - -	1	
H-6	套管 - - - - - Bushing (Lower Shaft Right-side) - - - - -	1	
H-7	E扣環5 - - - - - Retaining Rings-E Type 5 - - - - -	1	
H-8	彈簧 - - - - - Spring - - - - -	1	
H-9	銷 - - - - - Push Button - - - - -	1	
H-10	下軸連杆・凸輪(套) Feed Regulator Asm. - - - - -	1	
H-11	螺絲 - - - - - Screw 15/64-28*12 - - - - -	()	
H-12	下軸凸輪 - - - - - Feed Eccentric - - - - -	(1)	
H-13	下軸連杆 - - - - - Feed Connecting Rod - - - - -	(1)	
H-14	軸承 - - - - - Needle Bearing - - - - -	(1)	
H-15	軸用C扣環 26 - - - Retaining Rings-C Type 26 - - - - -	(1)	
H-16	油綫 - - - - - Oil Wick $\phi 3 \times 30$ - - - - -	1	
H-17	滑駒鎖 - - - - - Shaft - - - - -	1	
H-18	套管 - - - - - Bushing (Lower Shaft Middle-side) - - - - -	1	
H-19	套管 - - - - - Bushing - - - - -	1	
H-20	螺絲 - - - - - Screw 1/4-40*4 - - - - -	2	
H-21	滾珠軸承 - - - - - Ball Bearing - - - - -	1	
H-22	滾珠軸承壓板 - - - Bearing Holder - - - - -	1	
H-23	螺絲 - - - - - Screw 9/64-40*7 - - - - -	3	
H-24	墊圈 - - - - - Spacer - - - - -	1	
H-25	斜齒輪(大) - - - Spiral Gear (Large) - - - - -	1	
H-26	螺絲 - - - - - Screw 1/4-40*4 - - - - -	2	
H-27	螺絲 - - - - - Screw 1/4-40*5.5 - - - - -	1	
H-28	螺絲 - - - - - Screw 15/64-28*8 - - - - -	1	

I. GH 8365 下軸・送料機構 LOWER SHAFT & FEED MECHANISM COMPONENTS (2/3)

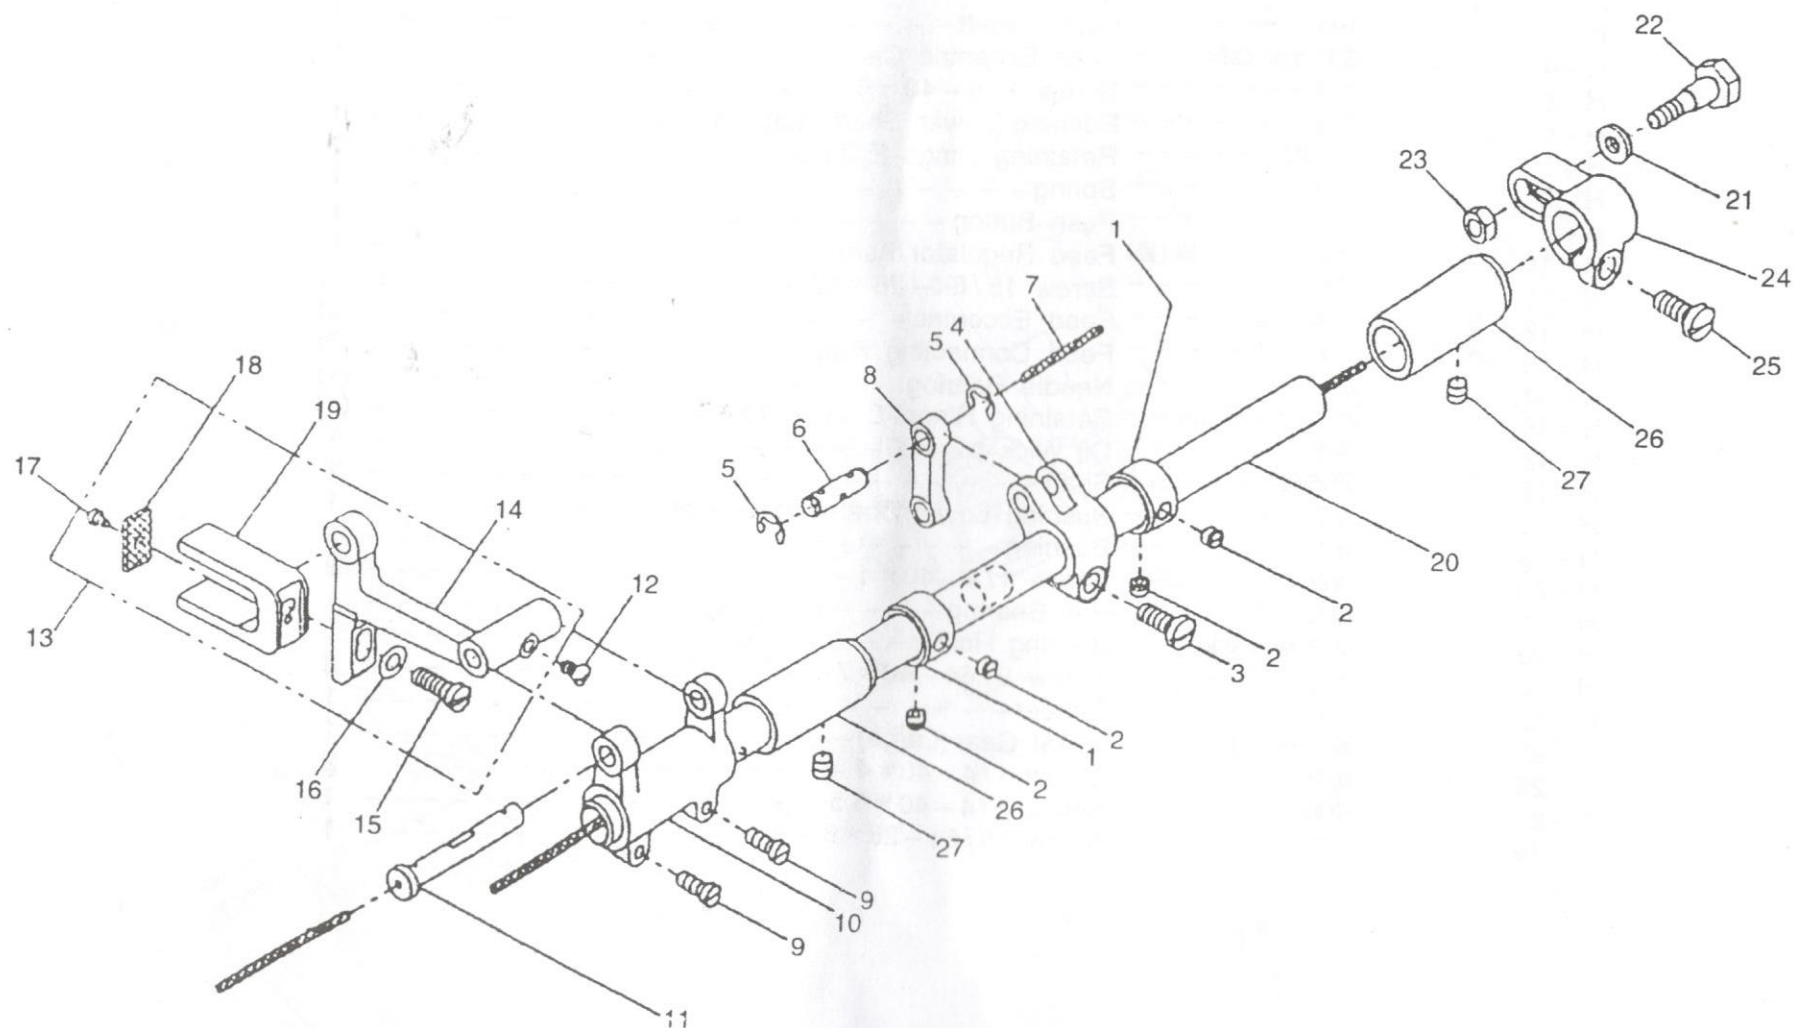

I. GH 8365 下軸・送料機構 LOWER SHAFT & FEED MECHANISM COMPONENTS (2/3)


零件號碼	零件名稱	件數	備 注
Part No.	Name of Part	Q'TY	Remarks
I-1	固定環----- Collar-----	2	
I-2	螺絲----- Screw 1/4-40*4-----	4	
I-3	螺絲----- Screw 1/4-24*16-----	1	
I-4	針送料杆----- Feed Connection Crank (Middle)-----	1	
I-5	E扣環 6----- Retaining Rings-E Type 6-----	2	
I-6	連接板鎖----- Shaft-----	1	
I-7	油綫----- Oil Wick $\phi 3 \times 30$ -----	1	
I-8	連接杆----- Link-----	1	
I-9	螺絲----- Screw 3/16-28*12-----	2	
I-10	水平送齒腕----- Feed Connection Crank (Left)-----	1	
I-11	送料土壹軸----- Feed Bar Shaft-----	1	
I-12	螺絲----- Screw 11/64-40*7-----	1	
I-13	送料土壹(套)----- Feed Bar Asm.-----	1	
I-14	送料土壹----- Feed Bar-----	(1)	
I-15	螺絲----- Screw 11/64-28*16.5-----	(1)	
I-16	平墊圈----- Washer 6-----	(1)	
I-17	螺絲----- Screw 1/8-44*4-----	(1)	
I-18	油棉----- Felt-----	(1)	
I-19	送料土一二叉----- Feed Bar Forked Connection-----	(1)	
I-20	水平運動軸----- Feed Rock Shaft-----	1	
I-21	平墊圈----- Washer 6-----	1	
I-22	螺絲----- Hinge Screw-----	1	
I-23	螺帽----- Nut M6*0.75-----	1	
I-24	針送料杆----- Feed Connection Crank (Right)-----	1	
I-25	螺絲----- Screw 1/4-24*16-----	1	
I-26	套筒----- Bushing-----	2	
I-27	螺絲----- Screw 1/4-24*8-----	2	

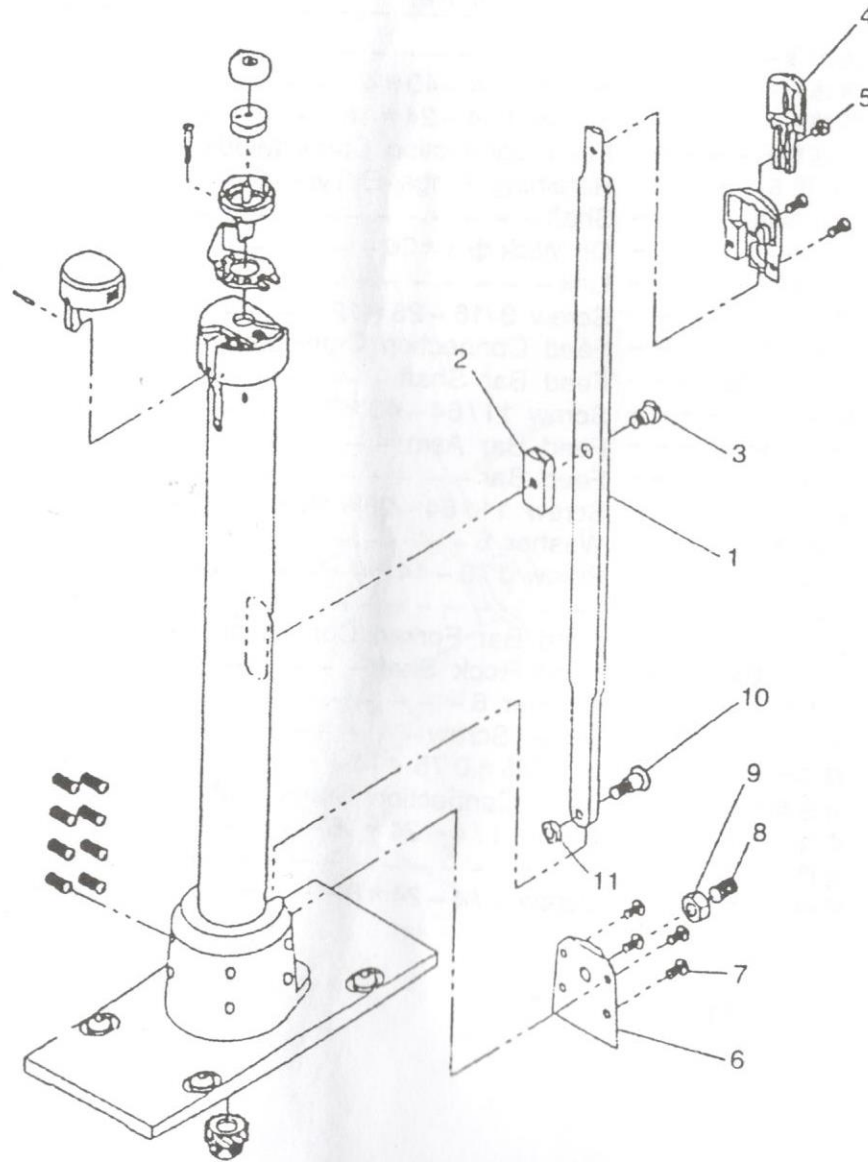

J. GH 8365 下軸・送料機構 LOWER SHAFT & FEED MECHANISM COMPONENTS (3/3)

零件號碼	零件名稱	件數	備 注
Part No.	Name of Part	Q'TY	Remarks
J-1	送齒板 - - - - - Feed Link - - - - -	1	
J-2	狗齒板滑塊 - - - Slide Block - - - - -	1	
J-3	螺絲 - - - - - Hinge Screw - - - - -	1	
J-4	單針狗齒 - - - Feed Dog - - - - -	1	
J-5	螺絲 - - - - - Screw 11/64-40*4.3 - - - - -	1	
J-6	護蓋 - - - - - Support Plate - - - - -	1	
J-7	螺絲 - - - - - Screw 11/64-40*7.8 - - - - -	4	
J-8	螺絲 - - - - - Screw M8*1.25*16 - - - - -	1	
J-9	螺帽 - - - - - Nut M8*1.25 - - - - -	1	
J-10	螺絲 - - - - - Hinge Screw - - - - -	1	
J-11	螺帽 - - - - - Nut 1/4-24 - - - - -	1	

J. GH 8365 下軸・送料機構 LOWER SHAFT & FEED MECHANISM COMPONENTS (3/3)

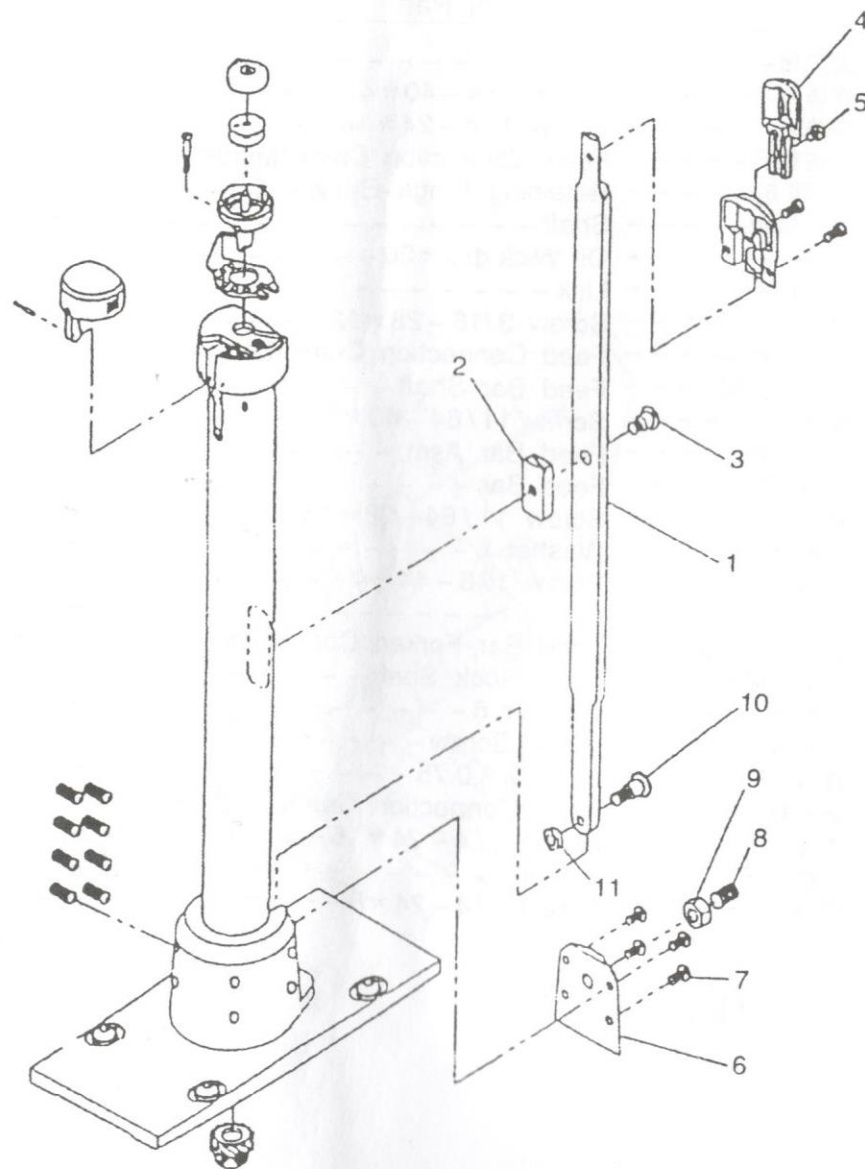


J. GH 8365

下軸・送料機構

LOWER SHAFT & FEED MECHANISM COMPONENTS (3/3)

零件號碼	零件名稱		件數	備 注
Part No.	Name of Part		Q'TY	Remarks
J-1	送齒板-----	Feed Link-----	1	
J-2	狗齒板滑塊-----	Slide Block-----	1	
J-3	螺絲-----	Hinge Screw-----	1	
J-4	單針狗齒-----	Feed Dog-----	1	
J-5	螺絲-----	Screw 11/64-40*4.3-----	1	
J-6	護蓋-----	Support Plate-----	1	
J-7	螺絲-----	Screw 11/64-40*7.8-----	4	
J-8	螺絲-----	Screw M8*1.25*16-----	1	
J-9	螺帽-----	Nut M8*1.25-----	1	
J-10	螺絲-----	Hinge Screw-----	1	
J-11	螺帽-----	Nut 1/4-24-----	1	

K. GH 8365 釜軸座機構 HOOK SADDLE MECHANISM COMPONENTS

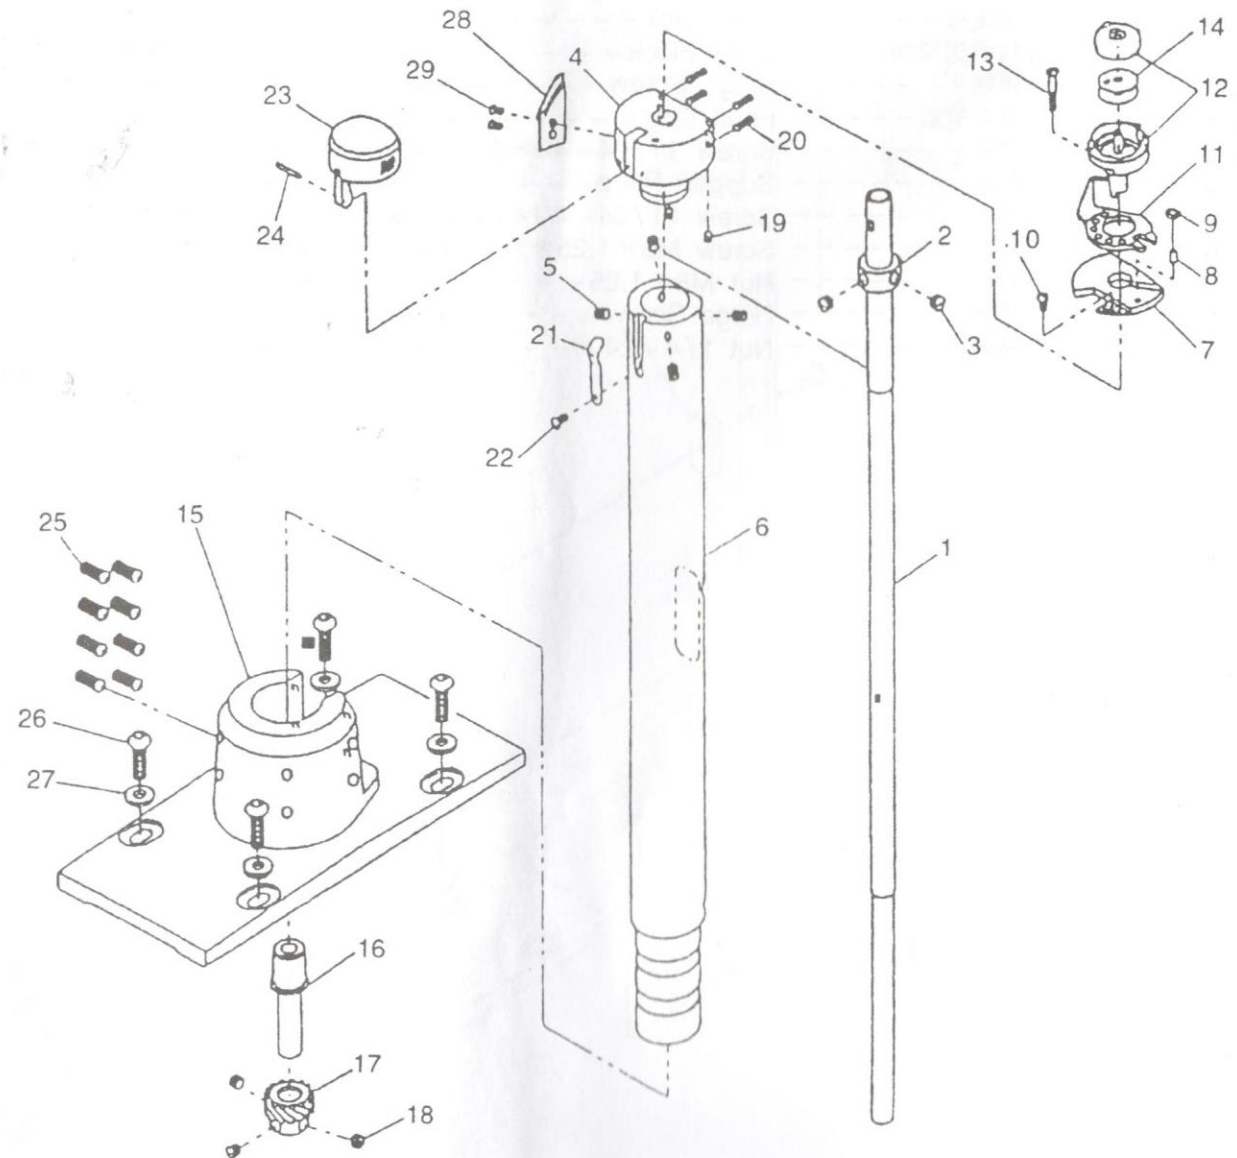


K. GH 8365

釜軸座機構

HOOK SADDLE MECHANISM COMPONENTS

零件號碼		零件名稱	件數	備 注
Part No.		Name of Part	Q'TY	Remarks
K-1	釜軸	Hook Shaft	1	
K-2	定環	Collar	1	
K-3	螺絲	Screw 1/4-40*4.5	2	
K-4	釜蓋	Hook Saddle	1	
K-5	螺絲	Screw M5*0.8*6	4	
K-6	釜蓋支持	Hook Saddle Support	1	
K-7	牛角連接器	Openner Link	1	
K-8	固定銷	Pin	1	
K-9	牛角導塊	Openner Slide Block	1	
K-10	螺絲	Screw 9/64-40*6	1	
K-11	牛角	Openner	1	
K-12	梭頭(套)	Hook Asm.	1	
K-13	螺絲	Screw 9/64-36*26	1	
K-14	梭孔	Bobbin	1	
K-15	釜蓋支持座	Hook Saddle Support Base	1	
K-16	套筒	Bushing	1	
K-17	斜齒輪(小)	Spiral Gear (Small)	1	
K-18	螺絲	Screw 1/4-40*4	3	
K-19	螺絲	Screw 9/64-40*6	2	
K-20	螺絲	Screw 9/64-40*10	4	
K-21	彈簧板	Spring Plate	1	
K-22	螺絲	Screw 1/8-44*3.5	1	
K-23	釜蓋(套)	Hook Cover Asm.	1	
K-24	彈簧銷	Spring Pin	1	
K-25	螺絲	Screw M6*1*15	8	
K-26	螺絲	Screw M6*1*20	4	
K-27	平墊圈	Washer 6	4	
K-28	側板	Side Cover	1	
K-29	螺絲	Screw 9/64-40*4	2	


L. GH 8365 縫綫壓力調整機構 UPPER THREAD TENSION REGULATOR MECHANISM COMPONENTS

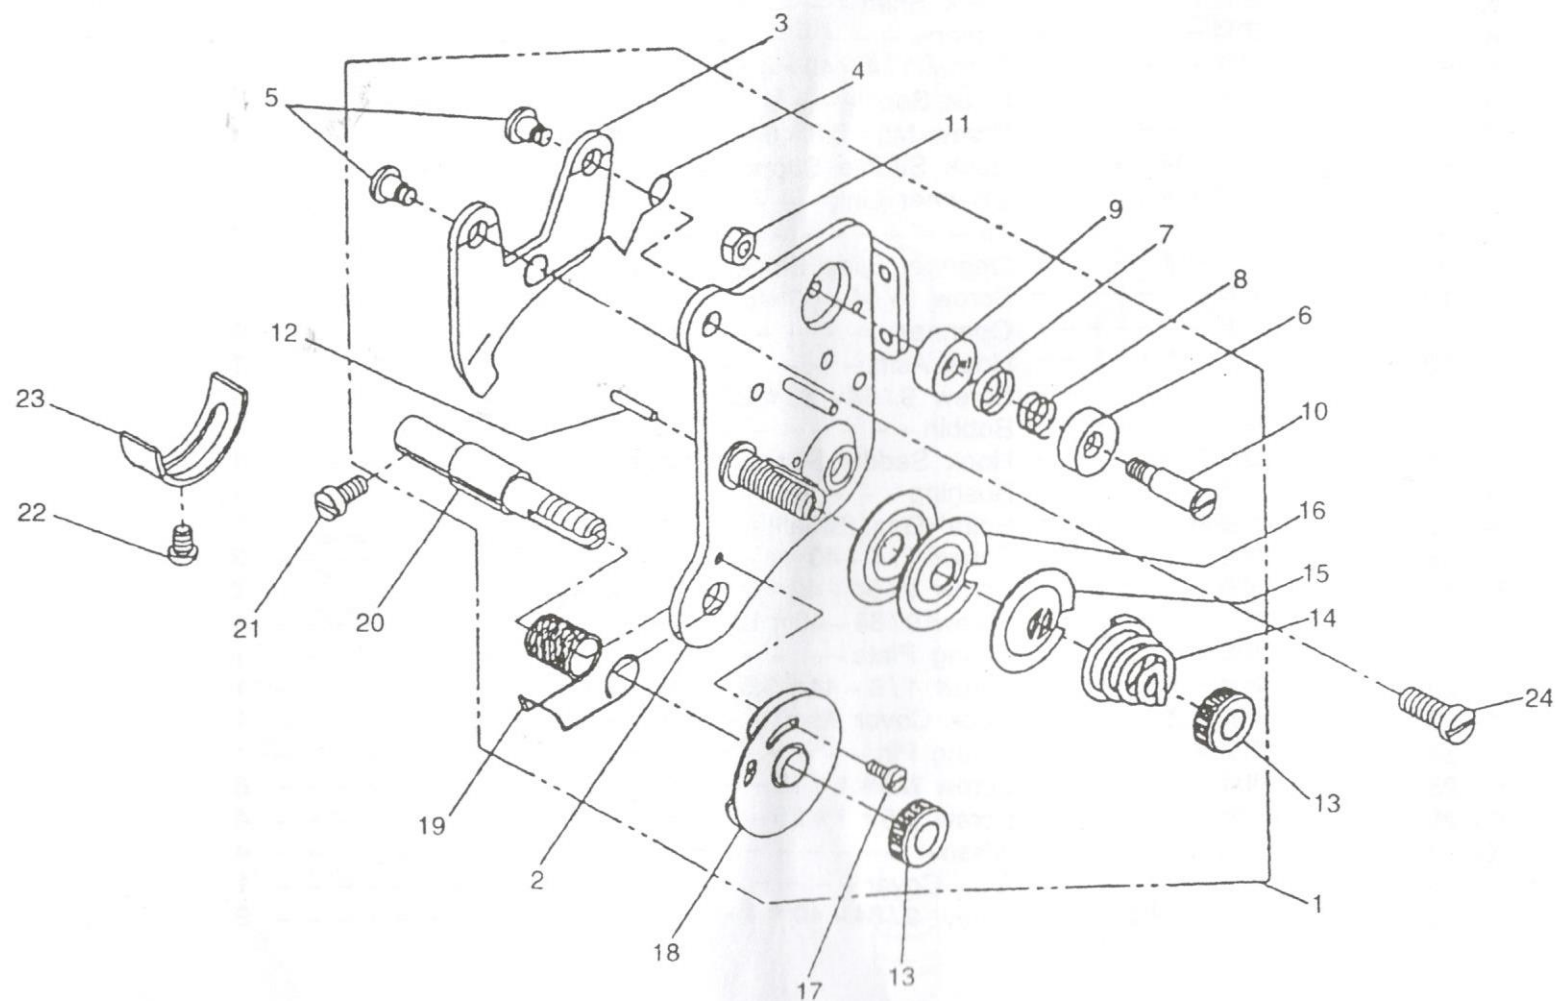

L. GH 8365 縫綫壓力調整機構 UPPER THREAD TENSION REGULATOR MECHANISM COMPONENTS

零件號碼	零件名稱	件數	備 注
Part No.	Name of Part	Q'TY	Remarks
L-1	上綫壓力板 (套)	Thread Tension Regulator Asm. - - - - -	1
L-2	上綫壓力板	Mounting Plate Asm. - - - - -	(1)
L-3	彈簧板	Tension Releasing Plate - - - - -	(1)
L-4	壓板彈簧	Tension Releasing Spring - - - - -	(1)
L-5	螺絲	Hinge Screw - - - - -	(2)
L-6	過綫孔壹	Thread Guide Disk - - - - -	(1)
L-7	過綫孔圓盤	Thread Guide Disk - - - - -	(1)
L-8	導綫彈簧	Spring - - - - -	(1)
L-9	過綫孔內蓋	Thread Guide Bracket - - - - -	(1)
L-10	螺絲	Hinge Screw - - - - -	(1)
L-11	螺帽	Nut 9/64-40 - - - - -	(1)
L-12	緩綫鎖	Tension Releasing Pin (small) $\phi 2 \times 12$ - - - - -	(1)
L-13	螺帽	Tension Thumb Nut 1/4-40 - - - - -	(2)
L-14	彈簧	Tension Spring - - - - -	(1)
L-15	綫調整壓板	Tension Regulator Presser Disk - - - - -	(1)
L-16	壓力板	Tension Regulator Disk - - - - -	(2)
L-17	螺絲	Screw 3/32-56*6 - - - - -	(1)
L-18	過綫盤組	Tension Controller Disk Set - - - - -	(1)
L-19	彈簧	Thread Take-up Spring - - - - -	(1)
L-20	調整螺絲棒	Tension Stud - - - - -	(1)
L-21	螺絲	Screw 15/64-28*11 - - - - -	1
L-22	螺絲	Screw 9/64-40*5 - - - - -	1
L-23	綫軸彈簧調整器	Stopper - - - - -	1
L-24	螺絲	Screw 11/64-40*7 - - - - -	1


M. GH 8365 油潤滑機構 OIL LUBRICATION MACHANISM COMPONENTS

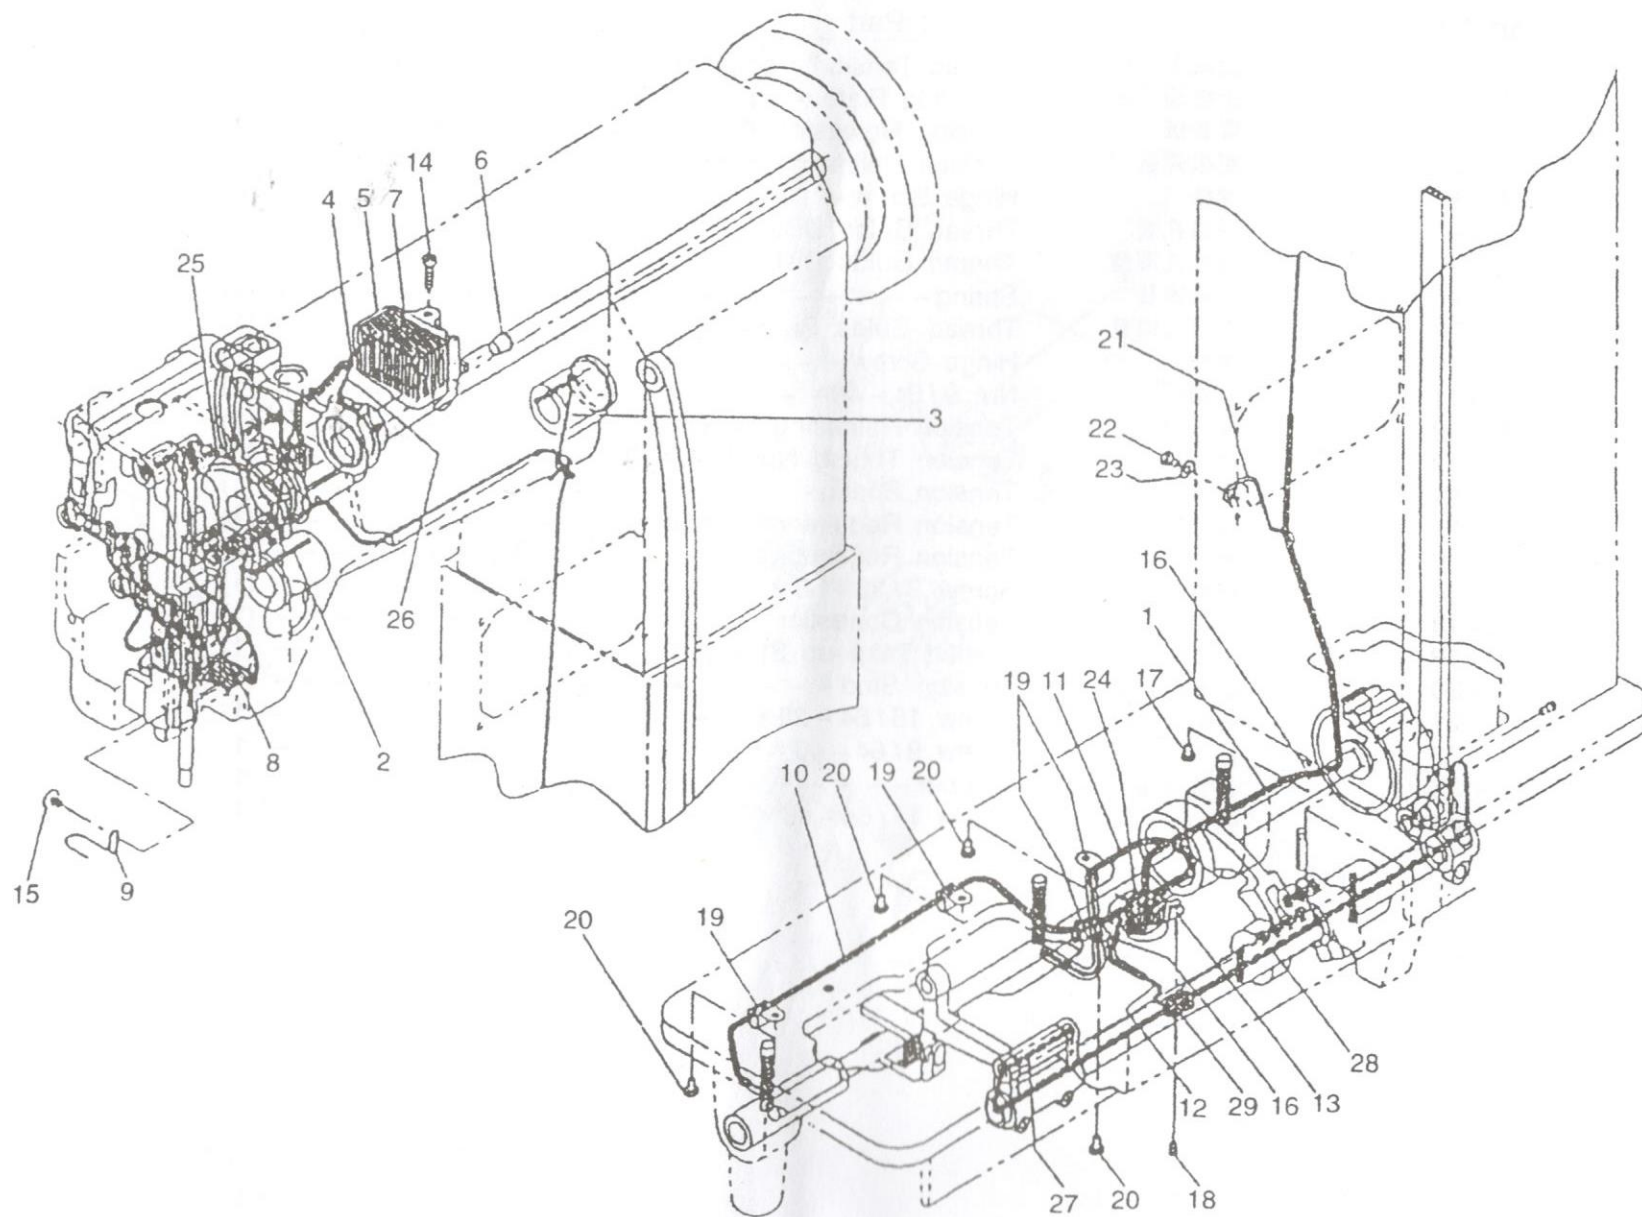

M. GH 8365 油潤滑機構 OIL LUBRICATION MACHANISM COMPONENTS

零件號碼	零件名稱	件數	備 注
Part No.	Name of Part	Q'TY	Remarks
M-1	油綫 (套) - - - - Oil Wick Asm. - - - - -	1	
M-2	油綫 - - - - - Oil Wick ϕ 2.5 * 45 - - - - -	1	
M-3	油綫 - - - - - Oil Wick - - - - -	1	
M-4	油綫 - - - - - Oil Wick ϕ 3 * 160 - - - - -	1	
M-5	油溜 - - - - - Oil Reservoir - - - - -	1	
M-6	塑膠塞 - - - - - Cap - - - - -	1	
M-7	油棉 - - - - - Felt - - - - -	1	
M-8	油棉 - - - - - Felt - - - - -	1	
M-9	油綫固定片 - - - - Holder - - - - -	1	
M-10	油綫 (套) - - - - Oil Wick Asm. - - - - -	1	
M-11	油綫 (套) - - - - Oil Wick Asm. - - - - -	1	
M-12	油綫 (套) - - - - Oil Wick Asm. - - - - -	1	
M-13	釜軸油溜 - - - - Oil Reservoir - - - - -	1	
M-14	螺絲 - - - - - Screw M4 * 15 - - - - -	2	
M-15	螺絲 - - - - - Screw 11 / 64 - 40 * 6.5 - - - - -	1	
M-16	油管固定片 - - - - Holder - - - - -	2	
M-17	螺絲 - - - - - Screw 9 / 64 - 40 * 6.5 - - - - -	1	
M-18	螺絲 - - - - - Screw 9 / 64 - 40 * 6.5 - - - - -	3	
M-19	油管固定片 - - - - Holder - - - - -	4	
M-20	螺絲 - - - - - Screw 9 / 64 - 40 * 6.5 - - - - -	4	
M-21	油管支持片 - - - - Holder - - - - -	1	
M-22	螺絲 - - - - - Screw 11 / 64 - 40 * 8 - - - - -	1	
M-23	平墊圈 - - - - - Washer 4.5 - - - - -	1	
M-24	油棉 - - - - - Felt - - - - -	1	
M-25	油綫 - - - - - Oil Wick ϕ 2.5 * 240 - - - - -	1	
M-26	油綫 (套) - - - - Oil Pipe Com. - - - - -	1	
M-27	油綫 - - - - - Oil Wick ϕ 3 * 150 - - - - -	1	
M-28	油綫 - - - - - Oil Wick ϕ 2.5 * 430 - - - - -	1	
M-29	油棉 - - - - - Felt - - - - -	1	


N. GH 8365 脚弓機構 KNEE LIFTER COMPONENTS

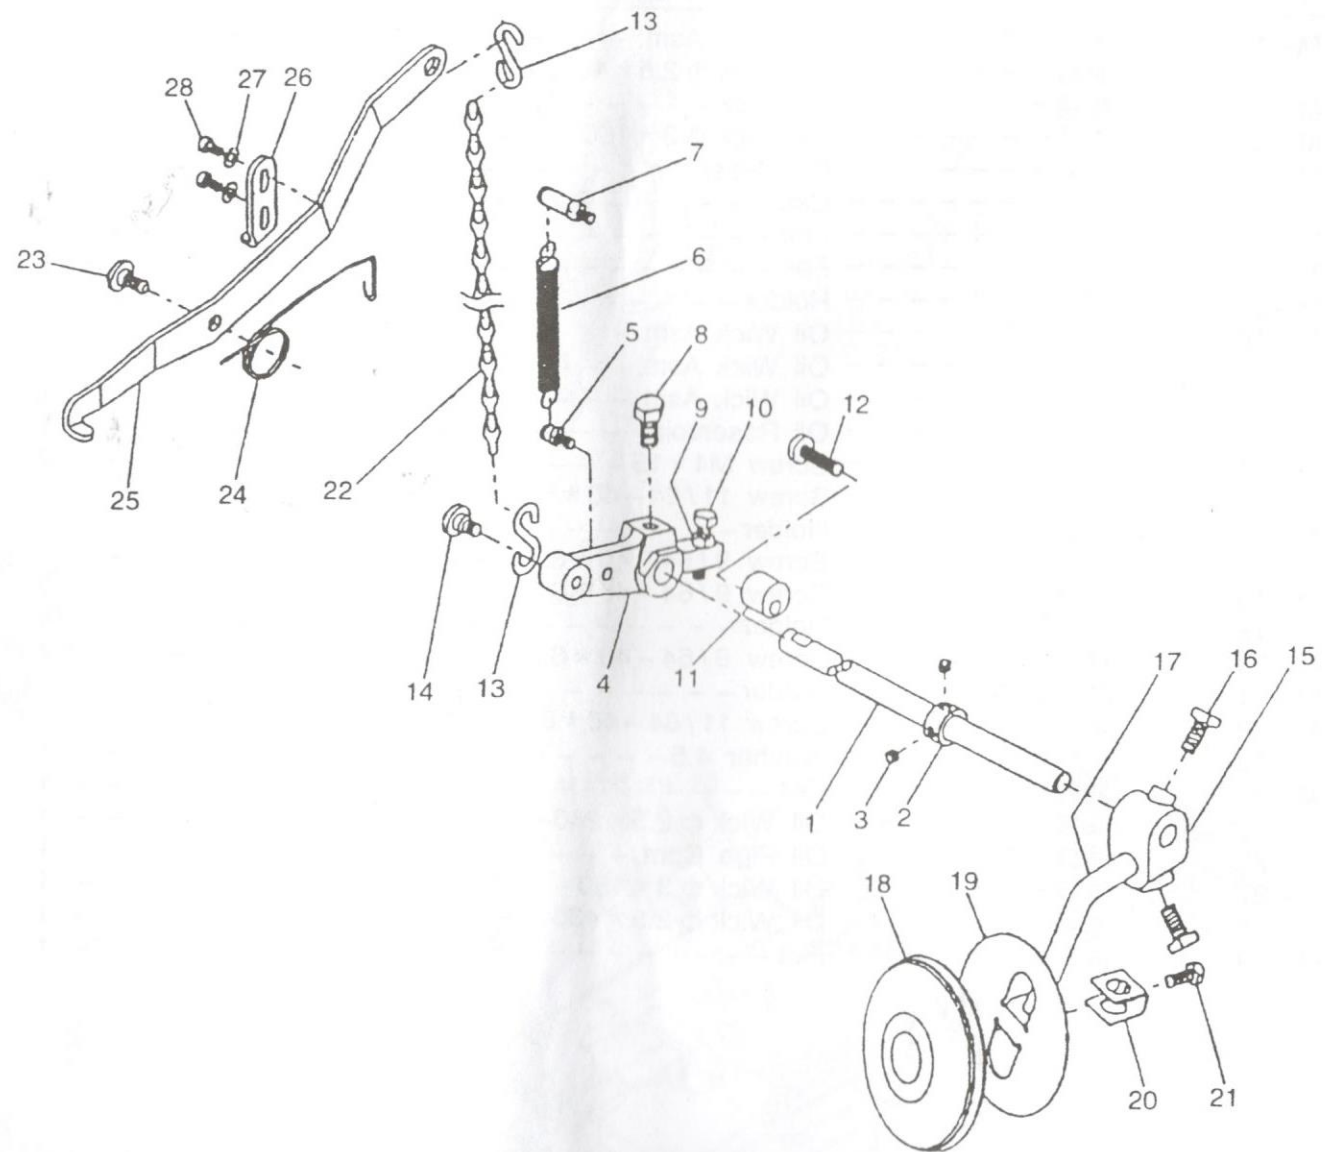

N. GH 8365 脚弓機構 KNEE LIFTER COMPONENTS

零件號碼	零件名稱	件數	備 注
Part No.	Name of Part	Q'TY	Remarks
N-1	脚押直杆 - - - - - Knee lifter shaft - - - - -	1	
N-2	定環 - - - - - Coller - - - - -	1	
N-3	螺絲 - - - - - Screw 1/4 - 40 * 4.5 - - - - -	2	
N-4	連接器 - - - - - Knee Lifter Crank (Rear) - - - - -	1	
N-5	彈簧挂 - - - - - Spring Hook - - - - -	1	
N-6	彈簧 - - - - - Spring - - - - -	1	
N-7	彈簧挂 - - - - - Spring Hook - - - - -	1	
N-8	螺絲 - - - - - Screw 5/16 - 18 * 16 - - - - -	1	
N-9	螺帽 - - - - - Nut M6 * 1 - - - - -	1	
N-10	螺絲 - - - - - Screw M6 * 1 * 25 - - - - -	1	
N-11	固定銷 - - - - - Stopper - - - - -	1	
N-12	螺絲 - - - - - Screw 1/4 - 24 * 25 - - - - -	1	
N-13	S型銷 - - - - - S-plug - - - - -	2	
N-14	螺絲 - - - - - Hinge Screw - - - - -	1	
N-15	連接器 - - - - - Knee Lifter Crank - - - - -	1	
N-16	螺絲 - - - - - Screw 5/16 - 18 * 16 - - - - -	2	
N-17	脚押曲杆 - - - - - Knee Lever Rod - - - - -	1	
N-18	脚弓大餅 - - - - - Knee Guird - - - - -	1	
N-19	脚弓餅支架 - - - - - Knee Plate - - - - -	1	
N-20	固定支架 - - - - - Retainer - - - - -	1	
N-21	螺絲 - - - - - Screw 15/64 - 28 * 14 - - - - -	1	
N-22	鎖子 - - - - - Chain (517.6mm) - - - - -	1	
N-23	螺絲 - - - - - Screw 1/4 - 24 * 14 - - - - -	1	
N-24	脚弓板彈簧 - - - - - Twist Spring - - - - -	1	
N-25	押脚提杆 - - - - - Knee Lifting Lever - - - - -	1	
N-26	固定片 - - - - - Stopper - - - - -	1	
N-27	平墊圈 - - - - - Washer 4.5 - - - - -	2	
N-28	螺絲 - - - - - Screw 11/64 - 40 * 8 - - - - -	2	

O. GH 8365 附件 ACCESSORIES

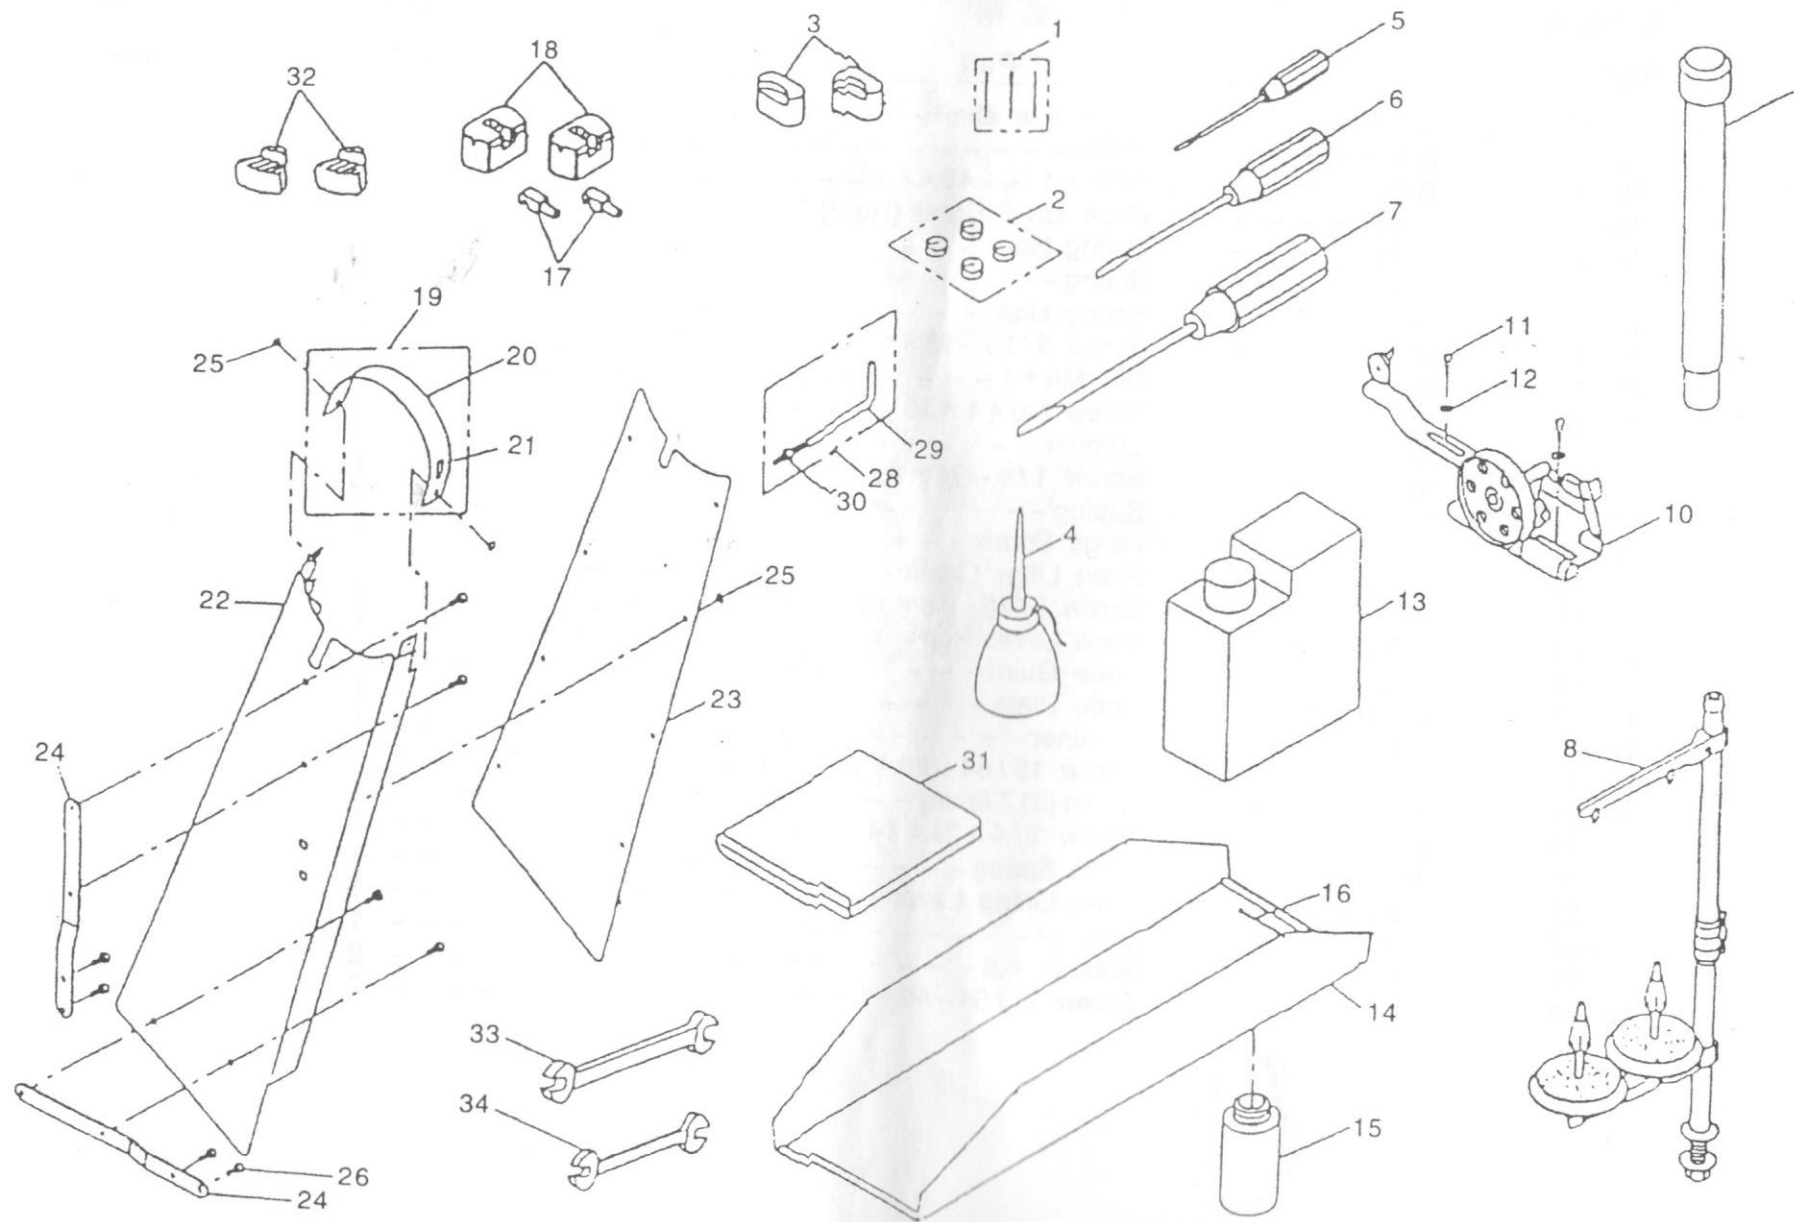

O. GH 8365 附件 ACCESSORIES

零件號碼		零件名稱	件數	備 注
Part No.		Name of Part	Q'TY	Remarks
O-1		針 - - - - - Needle Dp x 17 - 22 - - - - -	3	
O-2		梭孔 - - - - - Bobbin - - - - -	4	
O-3		防振橡膠 - - - - - Vibration Preventing Rubber - - - - -	2	
O-4		油壺 (中) - - - - - Oiler - - - - -	1	
O-5		螺絲起子 (小) - - - - - Screw Driver (small) - - - - -	1	
O-6		螺絲起子 (中) - - - - - Screw Driver (middle) - - - - -	1	
O-7		螺絲起子 (大) - - - - - Screw Driver (large) - - - - -	1	
O-8		- - - - - Cotton Stand - - - - -	1	
O-10		卷綫器組 - - - - - Bobbin Winder - - - - -	1	
O-11		木螺絲 - - - - - Screw 4.5 x 2 - - - - -	2	
O-12		平墊圈 - - - - - Washer 6 - - - - -	2	
O-13		油壺 (大) - - - - - Oil Can - - - - -	1	
O-14		下油槽 - - - - - Oil Pan - - - - -	1	
O-15		油壺 (小) - - - - - Oiler - - - - -	1	
O-16		鐵釘 - - - - - Nail - - - - -	12	
O-17		後鈕扣 - - - - - Head Hinge - - - - -	2	
O-18		後鈕座 - - - - - Rubber Hinge - - - - -	2	
O-19	※01	皮帶蓋 (套) - - - - - Belt Cover Asm. - - - - -	1	
O-20		皮帶蓋 - - - - - Belt Cover (c) - - - - -	(1)	
O-21		方向指示片 - - - - - Direction Lavel - - - - -	(1)	
O-22	※01	皮帶蓋 - - - - - Belt Cover (A) - - - - -	1	
O-23	※01	皮帶蓋 - - - - - Belt Cover (B) - - - - -	1	
O-24	※01	安裝板 - - - - - Plate - - - - -	2	
O-25		螺絲 - - - - - Screw M4 x 5 - - - - -	10	
O-26		螺絲 - - - - - Screw 15/64 - 28 x 10 - - - - -	8	
O-27		枕木 - - - - - Head Rest - - - - -	1	
O-28	※01	Supporter Asm. - - - - -	1	
O-29		檢出器定位銷 - - - - - Supperter - - - - -	(1)	
O-30		螺帽 - - - - - Nut 15/64 - 28 - - - - -	(1)	
O-31		車頭蓋 - - - - - Vinyl Cover - - - - -	1	
O-32		橡膠墊座 (灰色) - - - - - Head Cushion - - - - -	2	
Note (注記) ※01.....Optional part				
O-33		開口扳手 (11 x 14) Spanner - - - - -	1	
O-34		開口扳手 (9 x 10) Spanner - - - - -	1	

O. GH 8365 附件 ACCESSORIES

零件號碼	零件名稱	件數	備 注
Part No.	Name of Part	Q'TY	Remarks
O-1	針 - - - - - Needle Dp x 17 - 22 - - - - -	3	
O-2	梭孔 - - - - - Bobbin - - - - -	4	
O-3	防振橡膠 - - - - - Vibration Preventing Rubber - - - - -	2	
O-4	油壺 (中) - - - - - Oiler - - - - -	1	
O-5	螺絲起子 (小) - - - - - Screw Driver (small) - - - - -	1	
O-6	螺絲起子 (中) - - - - - Screw Driver (middle) - - - - -	1	
O-7	螺絲起子 (大) - - - - - Screw Driver (large) - - - - -	1	
O-8	- - - - - Cotton Stand - - - - -	1	
O-10	卷綫器組 - - - - - Bobbin Winder - - - - -	1	
O-11	木螺絲 - - - - - Screw 4.5 x 2 - - - - -	2	
O-12	平墊圈 - - - - - Washer 6 - - - - -	2	
O-13	油壺 (大) - - - - - Oil Can - - - - -	1	
O-14	下油槽 - - - - - Oil Pan - - - - -	1	
O-15	油壺 (小) - - - - - Oiler - - - - -	1	
O-16	鐵釘 - - - - - Nail - - - - -	12	
O-17	後鈕扣 - - - - - Head Hinge - - - - -	2	
O-18	後鈕座 - - - - - Rubber Hinge - - - - -	2	
O-19	※01 皮帶蓋 (套) - - - - - Belt Cover Asm. - - - - -	1	
O-20	皮帶蓋 - - - - - Belt Cover (c) - - - - -	(1)	
O-21	方向指示片 - - - - - Direction Lavel - - - - -	(1)	
O-22	※01 皮帶蓋 - - - - - Belt Cover (A) - - - - -	1	
O-23	※01 皮帶蓋 - - - - - Belt Cover (B) - - - - -	1	
O-24	※01 安裝板 - - - - - Plate - - - - -	2	
O-25	螺絲 - - - - - Screw M4 x 5 - - - - -	10	
O-26	螺絲 - - - - - Screw 15/64 - 28 x 10 - - - - -	8	
O-27	枕木 - - - - - Head Rest - - - - -	1	
O-28	※01 檢出器定位銷 - - - - - Supporter Asm. - - - - -	1	
O-29	螺帽 - - - - - Supperter - - - - -	(1)	
O-30	車頭蓋 - - - - - Nut 15/64 - 28 - - - - -	(1)	
O-31	橡膠墊座 (灰色) - - - - - Vinyl Cover - - - - -	1	
O-32	Head Cushion - - - - -	2	
Note (注記) ※01.....Optional part			
O-33	開口扳手 (11 x 14) Spanner - - - - -	1	
O-34	開口扳手 (9 x 10) Spanner - - - - -	1	